




NAPA
TECHNOLOGY



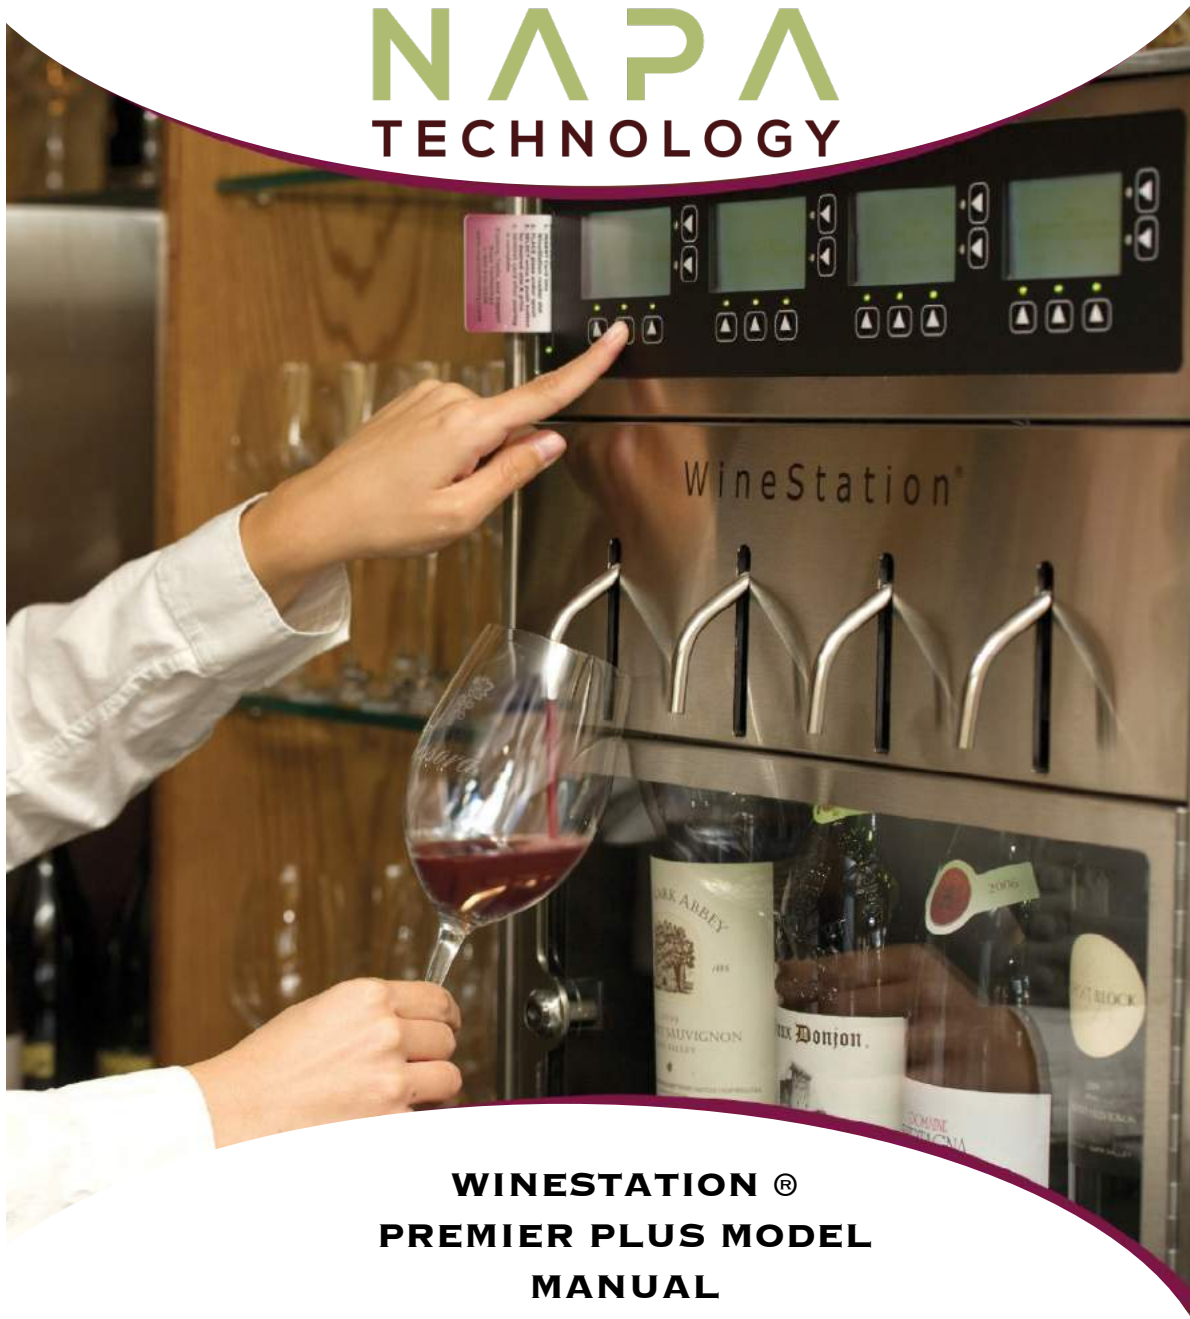

INTRODUCTION

Thank you for your purchase of the WineStation® Intelligent Dispensing System.

The WineStation® is the world's most advanced, automated, measured dispensing and preservation solution. Napa Technology has combined state-of-the-art technology, business intelligence, elegant style and ease of use into a breadth of commercial solutions. Our patented Clean-Pour™ hygienic dispensing technology with its unique seal and purge delivery, will provide a winery fresh taste every time for a period of 60 days. This feature allows you to preserve and manage product effectively and simply.

The AccuServe Software Management Suite provides you and your business with the tools and reporting necessary to profitably manage and grow your business. Be assured that our commitment to supporting your business with smart solutions goes well beyond the sale. We strive for superior customer satisfaction and timely, effective support. Please do not hesitate to contact us at any time so that we may serve your needs.

Sincerely,

The Napa Technology Team

TABLE OF CONTENTS

| Section | Page |
|---|------|
| 1. Safety Messages..... | 5 |
| 2. System Overview | 9 |
| 3. Preparing the Site, Unpacking and Installation Instructions..... | 10 |
| 4. Setting Up Laptop and Accessing Wine Database & AccuServe | 14 |
| 5. Getting Started: | |
| Setting Up Your Wine Database | 15 |
| Setting Defaults..... | 16 |
| Managing Wine List – Entering A Wine..... | 18 |
| Managing Wine List – Entering Pour Price..... | 19 |
| Managing Wine List – Happy Hour Feature..... | 20 |
| Managing Wine List – Assign Wine To Position..... | 21 |
| Staff Setup | 22 |
| Creating Staff Smartcards..... | 23 |
| Reporting | 24 |
| Features and Controls..... | 25 |
| 6. Attaching Clean-Pour Dispensing Heads..... | 29 |
| 7. Loading and Changing Bottles | 32 |
| 8. Preparing Bottles Outside of the System | 37 |
| 9. Dispensing with a Staff Smartcard | 38 |

TABLE OF CONTENTS

| Section | Page |
|--|------|
| 10. Dispensing with a Customer Smartcard..... | 39 |
| 11. Adjusting the Temperature..... | 40 |
| 12. Creating, Updating and Closing Customer Cards..... | 41 |
| 13. Cleaning and Care..... | 47 |
| 14. Additional Functions..... | 51 |
| Appendix: | |
| 15. Product Specifications..... | 52 |
| 16. Premier PLUS System LCD Display Modes..... | 57 |
| 17. AccuServe Smartcard Overview..... | 59 |
| 18. Troubleshooting Guide..... | 63 |
| 19. Limited Warranty Terms & Conditions..... | 68 |

SAFETY MESSAGES

This guide contains many important safety messages.
Always read and obey all safety messages.



This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that can kill or hurt you or others, or cause damage to the product.

All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:



You will be killed or seriously injured if you do not follow instructions.



You can be killed or seriously injured if you do not follow instructions.



Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury or product damage.



Your hand or fingers can be injured.
Do not place in area of moving parts.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

WARNING MESSAGES AND SAFETY INFORMATION



EXCESSIVE WEIGHT HAZARD

Use two or more people to move and install WineStation.
Failure to do so can result in back or other injury.



ELECTRICAL SHOCK HAZARD

FOR PERSONAL SAFETY, the WineStation must be properly grounded.
Have the wall outlet and the circuit checked by a qualified electrician to make sure the outlet is properly grounded.


3-prong grounding type wall receptacle



Ensure 3-prong grounded plug exists before use



Ensure proper grounding exists before use

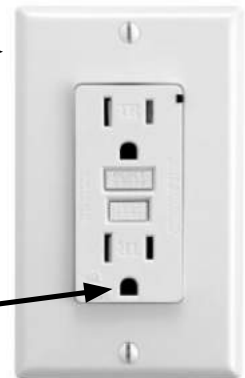

RECOMMENDED GROUNDING METHOD

The WineStation should always be plugged into its own individual properly, grounded electrical outlet rated for 115 Vac, 2A 50/60 Hz, AC only (230Vac 2A 50/60Hz in Europe). This provides the best performance and also prevents overloading facility wiring circuits which could cause a fire hazard from overheated wires. It is recommended that a separate circuit serving only the WineStation be provided. Use receptacles which cannot be turned off with a switch or pull chain. Do not use an extension cord. Where a standard two-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded three-prong wall outlet.

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord.

NOTE: Before performing any type of installation, cleaning, or removing of parts, turn the control OFF and then disconnect the WineStation from the electrical source. When you are finished, reconnect the WineStation to the electrical source and reset the controls to the desired setting.

IMPORTANT WARNING AND SAFETY

To reduce the risk of fire, electric shock, or injury to persons using your product, basic safety precautions should be followed, including the following;

- Read all instructions before using this product.
- The WineStation must be properly installed in accordance with the instructions provided by the manufacturer.
- Unplug your WineStation or turn off power at the circuit breaker or fuse box before cleaning, parts replacement or repairs. Servicing must be performed by a qualified service professional.
- NEVER unplug your WineStation by pulling on the power cord. Always grip the plug firmly and pull it straight out from the outlet.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either the plug or connector end.
- When moving your WineStation away from the wall, be careful not to roll over or damage the power cord.
- DO NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- DO NOT allow children to climb, stand, or hang on the WineStation doors. They could damage the WineStation and seriously injure themselves.
- Keep fingers out of pinch point areas; clearances between the doors and cabinet are necessarily small. Be careful closing doors when children are in the area.
- Do not insert pens, pencils or other objects into any opening of the WineStation. Do not put hands or foot or metal sticks into air vents, base grille, or bottom of the WineStation. You may be injured or receive an electrical shock.
- Avoid contact with the moving parts. DO NOT place fingers or hands into the bottle bay assembly to diagnose potential problems with the WineStation.
- Do not modify or extend the power cord length. It will cause electric shock or fire.
- Care should be taken when handling pressurized gas. You should ensure the proper tubing and shut-off valves are used.
- Not suitable for installation in an area where a water jet could be used.
- Only to be installed in locations where its installation and maintenance is restricted to trained personnel.
- The WineStation must be placed in a vertical position.

**** SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE ****


 **CAUTION**

Access to the WineStation for service, including bottle changing and preparation, should be limited to qualified service professionals and trained staff only!

DO NOT place fingers or hands into the bottle bay assembly.



SYSTEM OVERVIEW

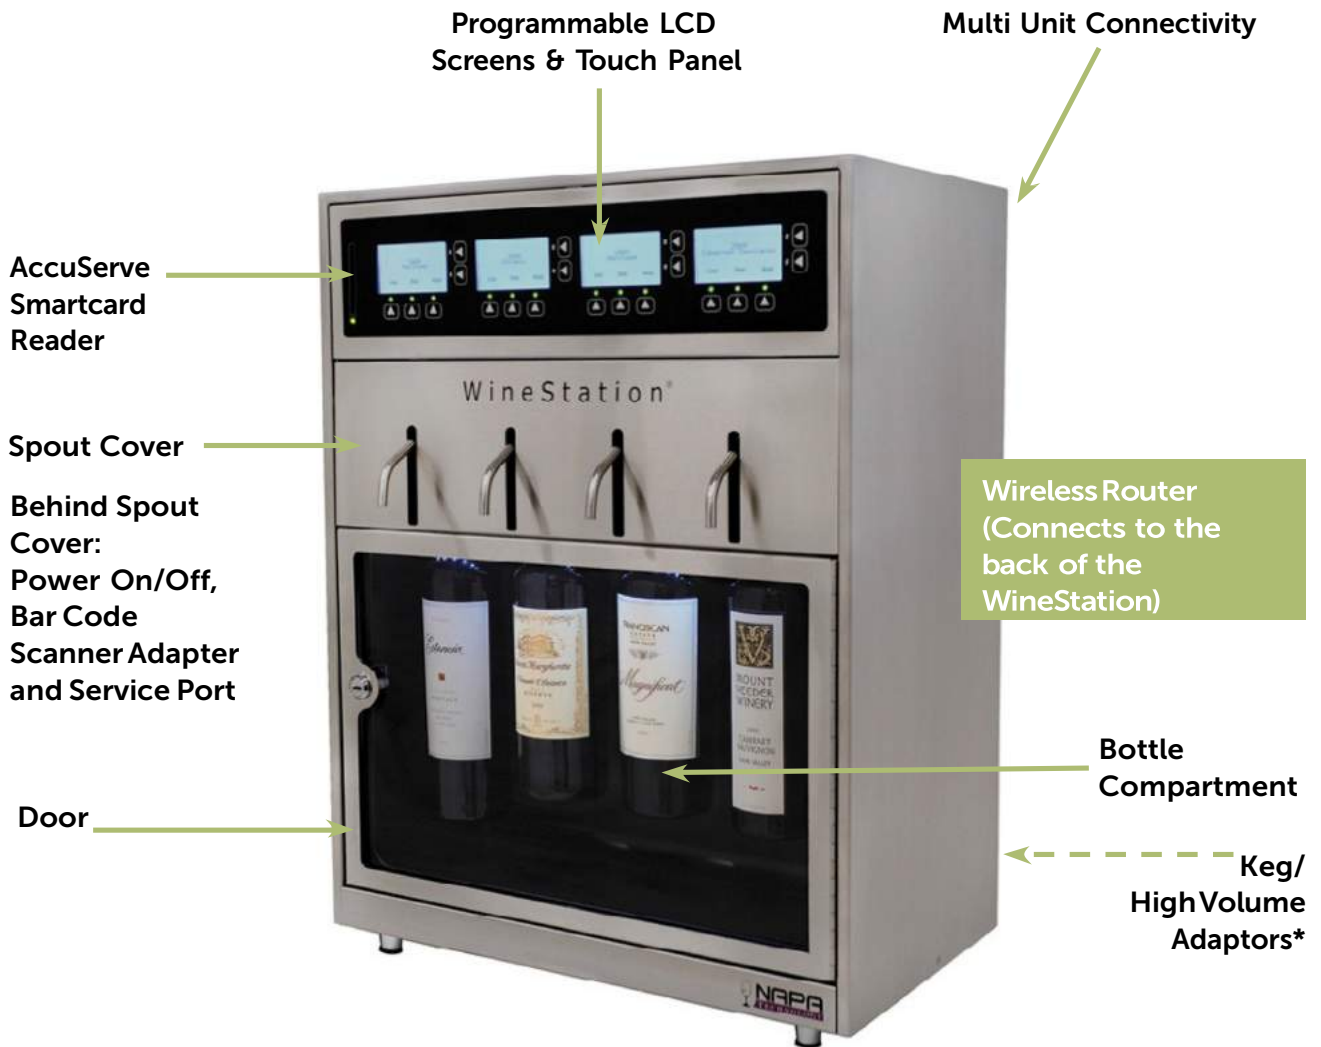

Card creation location (not shown):

- PC with AccuServe Software
- Smartcard Reader/Writer



Ultra High Purity Argon Cylinders & Regulator with pressure gauges.**

Regulators with pressure gauges

Gas tubing (with filter)

*not a standard feature

**UHP Argon and regulator sold separately through Napa Technology

PREPARING THE INSTALLATION SITE

If you have not already done so, please review the product specifications in the Appendix, and ensure that the intended installation location meets all of the technical and legal requirements.

In particular, consider the following:

- Adequate space availability.
- Adequate weight load capacity.
- Adequate ventilation (see drawings for air circulation paths).
- A nearby grounded electrical outlet.
- An external UPS with backup battery is recommended.
- Ultra High Purity Argon can be sourced through Napa Technology. Two tanks (one for back up) is recommended. Additional tanks may be required dependent upon the size of the systems and/or configuration
- Any potential safety hazards that might interfere with the installation or operation of the unit.
- Compliance with any applicable laws, regulations, standards, and other legal requirements that may apply to the installation and operation of the WineStation in your establishment.

Finally, please ensure that the installation surface is level, clean, dry, and free of any debris, loose parts or potential safety hazards that might interfere with the installation.

IMPORTANT NOTICE:



Before installing the WineStation, please ensure that you have read, understood and complied with the safety information and installation requirements contained in the previous section.

Failure to do so could result in death, serious injury, or product damage, and void your warranty.

If you have any questions or concerns regarding the above, please contact us before you proceed.

UNPACKING AND INSTALLING YOUR WINESTATION(S)

1. Unpacking and Installing the WineStation

| | |
|--|---|
|  WARNING |  CAUTION |
| <p>Excessive Weight Hazard!</p> <p>Your WineStation is heavy (see Product Specifications).</p> <p>Always use two or more persons to move the WineStation. Failure to do so can result in serious back or other injury.</p> | <p>Protect your Countertop/ Installation Area!</p> <p>When moving the WineStation for installation, cleaning or service purposes, be sure to protect your countertop. Always lift and pull the WineStation straight out when moving it. Do not wiggle or walk the WineStation, as this may cause countertop and/or product damage.</p> |

- a. Please move box to the installation location. The WineStation system is packed in the box with the display window facing toward box opening.
- b. It is suggested to open box along the taped closure.
- c. Remove the foam support. Along each side, you will find spacing to allow for a firm grip of the WineStation, so that you may lift it straight out of the box and onto its back on a flat counter or surface.

NOTE: The WineStation weighs 85 lbs. and may require 2 people to safely remove from packaging.

- d. The WineStation Leveling Feet and Security door keys will be found in the supplemental Ship Kit containing many of the accessories. Secure the Leveling Feet for application to the bottom of the unit.
- e. Resting the WineStation on its “back” will not harm the system and allow for proper application of the Leveling Feet.
- f. Once the Leveling Feet have been firmly secured, the WineStation can be lifted into an upright position.
- g. Ensure that the WineStation is properly leveled. If necessary, adjust the four leveling feet on the bottom of the unit by turning them in the appropriate direction. Normally, all four leveling feet should be fully tightened (as short as possible). **DO NOT** remove leveling feet, as they are required for proper air circulation and protecting the WineStation from harmful surfaces and debris. Removal of Leveling Feet will void product warranty. (See Appendix Product Specifications for clearance and spacing information.)

UNPACKING AND INSTALLING YOUR WINESTATION(S)

2. Setting up the Router.

- a. Plug the Ethernet cable(s) extending from the back of each Master Unit(s) into any one of the connector jacks labeled 1, 2, 3, or 4 on the back of the router (provided). DO NOT plug any Ethernet cable(s) into the jack labeled "Internet".
- b. Plug the power adapter from the router into outlet or power strip.

3. Connecting the Gas Cylinder.

Ultra High Purity argon cylinders can be sourced directly through Napa Technology, as can the regulator. Both are required for operation. Please see product specifications for more detail.

Note: It is recommended that you source two (2) cylinders, and always keep a full cylinder on-site as backup. This will allow you to quickly replace the cylinders when needed, without having to wait for the gas company to deliver a new one.

- a. Verify that the black O-ring on the threaded gas regulator nipple is in good condition (not cracked, torn or worn out).
- b. Install the gas regulator provided tightly into the gas cylinder. Hand-tighten securely, then complete connection with a wrench. Do not over tighten, for easy removal and replacement.
- c. Plug one end of the gas tubing into the connector at the back of the WineStation. For stations of 8 bottles or more, first plug the "F"-Shaped connector(s) into the back of the WineStations, and then, plug the straight line tubing into the open end of the "F"-Shaped connector.
- d. Plug the other end of the (straight line) gas tubing onto the gas regulator.
- e. Turn gas tank valve open all the way.
- f. Check the reading on both regulator gauges. For a full cylinder, the high-pressure gauge should read about 2,000 PSI, and the low pressure gauge should read 35-45 PSI.

UNPACKING AND INSTALLING YOUR WINESTATION(S)

4. Power on the WineStation.

- a. You will find the power brick extending from the back of the WineStation, and the power cord required for proper operation, stored inside the WineStation cabinetry.

NOTE: A 200 VA per 4 bottle WineStation UPS battery backup is strongly recommended for optimal operation.

- b. Turn the power switch on in the front of the unit, located under the spout cover. Switch up for on, or all the way down for off.

Congratulations!!!

**You have completed the Hardware Installation.
You are now ready to set-up your software & wine bottles.**

SETTING UP LAPTOP AND ACCESSING WINE DATABASE & ACCUSERVE

1. Set up the back office laptop or PC. (If Laptop is NOT included, the Back Office PC will need to be configured to access the **WineStation Network**, **WineStation Portal**, & the **Napa Technology AccuServe™ Smartcard** software will need to be installed.)

Instructions for included Laptop:

NOTE: The laptop is wireless and can be located up to 200 feet away from the WineStation.

- a. Unpack the laptop (provided).
- b. Plug the power cord (provided) into the laptop and a wall outlet.
- c. Plug the hand held bar code scanner (provided) into a USB port on the laptop.
- d. Plug the desktop Omnikey Smartcard Reader (provided) into a USB port on the laptop.
- e. Power on the laptop (Make sure that the WineStation is powered up first)


Username: **WineStation**
Default password: **Secret**

- f. The laptop has two icons on the desktop:

WineStation Portal – used to enter wines in the database, pricing, staff info, reports, and system settings.

Napa Technology AccuServe™ Smartcard – used to set up the staff and associated smart cards.

GETTING STARTED

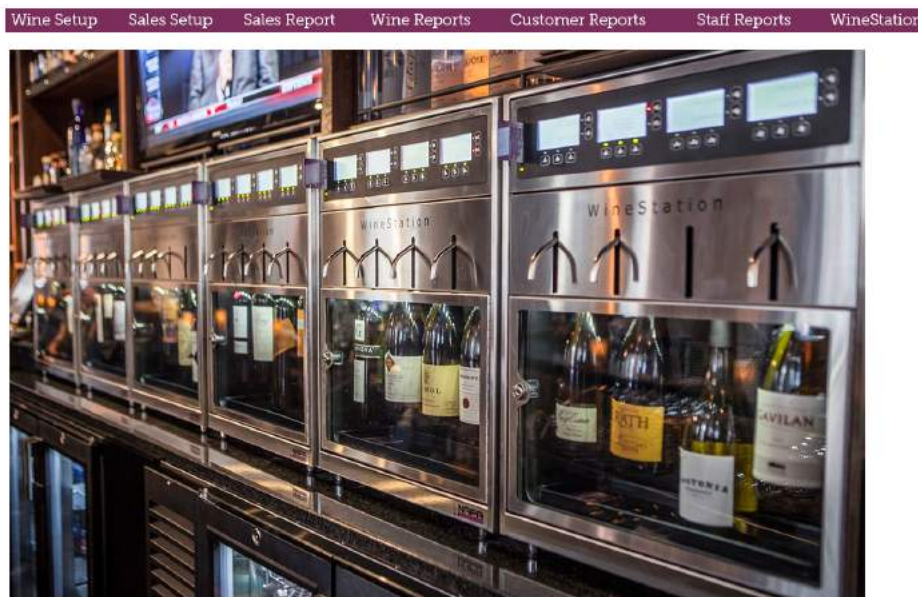

Version 3.0.1

Once you are ready to begin, you will access the WineStation Portal from the desktop icon on your laptop. The following password will be required:

Username: idsop
Password: vintage

From this main screen, you will be able to execute the following:

Wine Setup: From here, you will be able to manage wine list, assign wines to position and set new wine defaults.

Staff Set Up: From here, you will be able to add/delete staff members and management, so that they may access the WineStation.

Sales Reports: From here, you will be able to run reports by brand, varietal, employee, card type, customer, group/location, or by system.

Wine Reports: From here, you will be able to run reports by brand or by overall wine balance.

Customer Reports: From here, you will be able to run reports based on customer sales, by card number, by customer name or by customer list.

GETTING STARTED - Continued

Staff Reports: From here, you will be able to populate staff reporting by total sales detail, cards created and tab card report.

WineStation: There are numerous functions that you will be able to control including Scheduling (happy hour/on and off), Features (such as text, language etc), Location, Configuration and Configuration Overrides, from this section of the database.

Step One: Setting Up Your Wine Database – Setting Defaults



- a. The first step in setting up your wine database is to set your defaults. First, select Set New Wine Defaults from the drop down list and click the Edit button.

| Wine Defaults | |
|-------------------------------------|------------------|
| Bottle price: | \$0.00 |
| Bottle size: | 750 ml (25.0 Oz) |
| Price adjustment: | 100 % Markup |
| Left button name: | Taste |
| Left button volume: | 1.00 Oz |
| Center button name: | Half |
| Center button volume: | 3.00 Oz |
| Right button name: | Full |
| Right button volume: | 6.00 Oz |
| <input type="button" value="Edit"/> | |


Each default value is used when adding a new wine to the wine list.

Diagram annotations: Arrow 'b' points to the 'Bottle size' field. Arrow 'c' points to the 'Left button name', 'Center button name', and 'Right button name' fields.

GETTING STARTED - Continued

- b. Then select the Bottle Size you will be using in your WineStation.
- c. Next, you may edit the Push Button text (i.e.: Taste, Half, Full OR any variation you wish such as Sip, Swirl, Savor) for the Left, Center and Right buttons.

Step Two: Setting up the Wine Database – Managing Wine List

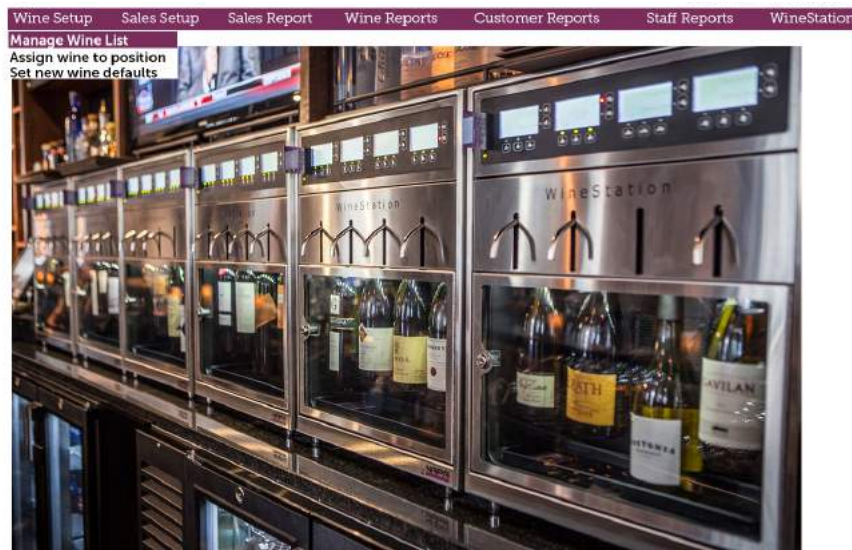

- a. To begin entering information into your database, select Manage Wine List from the drop down bar.

NOTE: Entering each wine is a two-step process. You must first scan or manually enter the wine UPC, and then enter a Pour Price. If you do not enter the Pour Price, the WineStation will not recognize the wine.

GETTING STARTED - Continued

b. Entering a wine.




Wine Setup Staff Setup Sales Reports Wine Reports Customer Reports Staff Reports WineStation

Please scan or enter wine bottle's barcode number (UPC):

Filter wine list by: name beginning with *

| Name | Varietals | Year | UPC |
|------------------------|-------------|------|--------------|
| Select Napa Technology | WineStation | 2011 | 999999999999 |
| Select Hess | Chardonnay | 2008 | 717888120224 |
| Select Whitehall | | | 011628701026 |
| Select Test001 | | | 000000001234 |
| Select Byington | Pinot Noir | 2007 | 029679160604 |

- i. Using the Bar Code Scanner attached to the laptop, scan the barcode on your first bottle of wine. If a bottle does not have a barcode, a 12 digit code must be created for the wine bottle. The barcode will display on the screen. *This process can also be managed manually and does not require the use of the bar code scanner to enter data.*
- ii. Now click on the Enter Button.

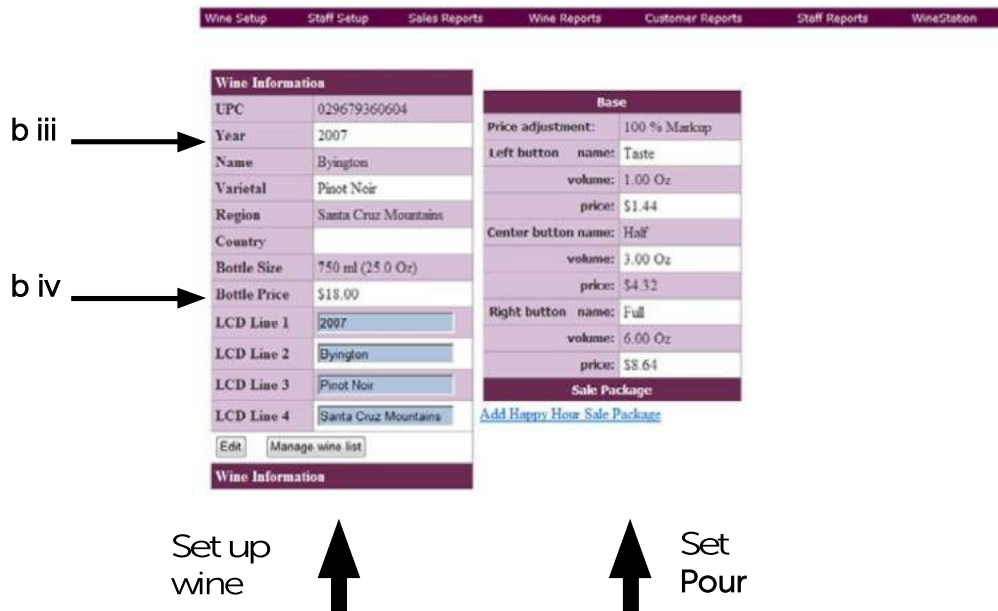

Wine Setup Staff Setup Sales Reports Wine Reports Customer Reports Staff Reports WineStation

Wine Information

UPC: 029679360604

Year: 2007

Name: Byington

Varietal: Pinot Noir

Region: Santa Cruz Mountains

Country:

Bottle Size: 750 ml (25.0 Oz)

Bottle Price: \$18.00

LCD Line 1: 2007

LCD Line 2: Byington

LCD Line 3: Pinot Noir

LCD Line 4: Santa Cruz Mountains

[Add Happy Hour Sale Package](#)

Base

Price adjustment: 100 % Markup

Left button name: Taste

volume: 1.00 Oz

price: \$1.44

Center button name: Half

volume: 3.00 Oz

price: \$4.32

Right button name: Full

volume: 6.00 Oz

price: \$8.64

Sale Package:

[Add Happy Hour Sale Package](#)

Set up wine

↑

Set Pour

↑

GETTING STARTED - Continued

- iii. The default for the WineStation LCD display is as follows:
 - Year
 - Wine Brand
 - Varietal
 - Region
- iv. Next begin entering the information in the white boxes on the screen. **Note:** Bottle Price is the Wholesale price that you paid for the wine. For Retailers, use retail pricing as your cost and then mark-up accordingly. The store will then sell the bottle to the WineStation at retail and deduct the bottle from inventory.
- v. Press Save when done.
- vi. If you would like custom messages to appear on the WineStation LCD display, you can check the box at the top of the screen which indicates manual LCD entry. Or you can save the information and then edit the desired entries in the blue lines.

c. Entering the Pour Price

Note: You must enter the Pour Price information. If this information is not provided, the WineStation will not recognize the wine bottle when you scan it into the WineStation for serving.

- i. Enter Price Per Pour. You can enter a specific value and make calculations yourself.
- ii. Alternatively, you can click on the Use Markup check box and the system does the calculations for you. Just specify the % for markup and click Calculate. The calculated pricing for each pour will be displayed. You can accept the recommended prices or make changes.
- iii. Set volume for each pour. You can accept the defaults for the Taste, Half Glass, and Full Glass or you can change the volume for each pour.
- iv. You can also change the volume per pour and recalculate or you can override the suggested pricing.

Note: You do not need to enter your entire wine selection into the database at once. Additional wines can be entered at any time, as the need arises to place them in the system. In addition, all the information entered (information displayed, portion sizes, and prices) can be edited or updated at any time, simply by clicking "Edit" on the appropriate screen.

GETTING STARTED - Continued

d. Entering Happy Hour Pricing


| Wine Information | | Base | |
|---|----------------------|---|--------------|
| UPC | 029679360604 | Price adjustment: | 100 % Markup |
| Year | 2007 | Left button name: | Taste |
| Name | Byington | volume: | 1.00 Oz |
| Varietal | Pinot Noir | price: | \$1.44 |
| Region | Santa Cruz Mountains | Center button name: | Half |
| Country | | volume: | 3.00 Oz |
| Bottle Size | 750 ml (25.0 Oz) | price: | \$4.32 |
| Bottle Price | \$18.00 | Right button name: | Full |
| LCD Line 1 | 2007 | volume: | 6.00 Oz |
| LCD Line 2 | Byington | price: | \$8.64 |
| LCD Line 3 | Pinot Noir | Sale Package | |
| LCD Line 4 | Santa Cruz Mountains | Add Happy Hour Sale Package | |
| <input type="button" value="Edit"/> <input type="button" value="Manage wine list"/> | | | |

i. Click Add Happy Hour Sale Package

| Wine Information | | Base | | Happy Hour | |
|------------------|----------------------|-------------------------------------|--------------|---|--|
| UPC | 029679360604 | Price adjustment: | 100 % Markup | 0% Discount | |
| Year | 2007 | Left button name: | Taste | Taste | |
| Name | Byington | volume: | 1.00 Oz | 1.00 Oz | |
| Varietal | Pinot Noir | price: | \$1.44 | \$1.44 | |
| Region | Santa Cruz Mountains | Center button name: | Half | Half | |
| Country | | volume: | 3.00 Oz | 3.00 Oz | |
| Bottle Size | 750 ml (25.0 Oz) | price: | \$4.32 | \$4.32 | |
| Bottle Price | \$18.00 | Right button name: | Full | Full | |
| LCD Line 1 | 2007 | volume: | 6.00 Oz | 6.00 Oz | |
| LCD Line 2 | Byington | price: | \$8.64 | \$8.64 | |
| LCD Line 3 | Pinot Noir | Sale Package | | Sale Package | |
| LCD Line 4 | Santa Cruz Mountains | <input type="button" value="Edit"/> | | <input type="button" value="Manage wine list"/> | |

- ii. Once in the Happy Hour feature, select the edit button.
- iii. Then choose the % of discount you wish to apply to that select wine.
- iv. Then select the oz size you wish to pour.
- v. Then select the price. Then select save, and continue as needed.

GETTING STARTED - Continued

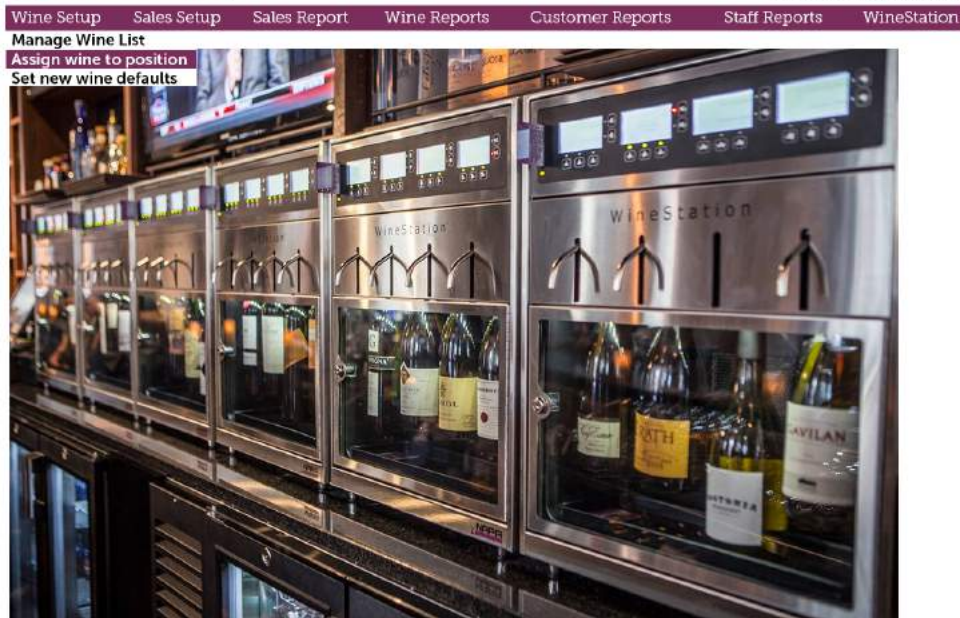

Step Three: Wine Setup – Assign Wine To Position

Step a →

Wine Setup Staff Setup Sales Reports Wine Reports Customer Reports Staff Reports WineStation

Select the WineStation module. Select the positions. Then "Select" the wine to assign to the positions.

Master Unit: WineStation 1 Module Number: 01 → Step b

| | | | |
|---|---|---|---|
| WineStation Napa Technology www.winestation.com (800) 916-3338 | WineStation Napa Technology www.winestation.com (800) 916-3338 | WineStation Napa Technology www.winestation.com (800) 916-3338 | WineStation Napa Technology www.winestation.com (800) 916-3338 |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |

Step c

Filter wine list by: name beginning with: Enter


| Name | Varietals | Year | UPC |
|------------------------|-------------|------|--------------|
| Select Napa Technology | WineStation | 2011 | 999999999999 |
| Select Hess | Chardonnay | 2008 | 717888120224 |
| Select Whitehall | | | 011628701026 |
| Select Test001 | | | 000000001234 |
| Select Byington | Pinot Noir | 2007 | 029679360604 |

Step d

- Select Master Unit
- Select Module Number
- Select position
- Select Wine from list, then select Save to complete. Repeat steps as needed to assign desired wines.


GETTING STARTED - Continued

Step Four: Staff Setup

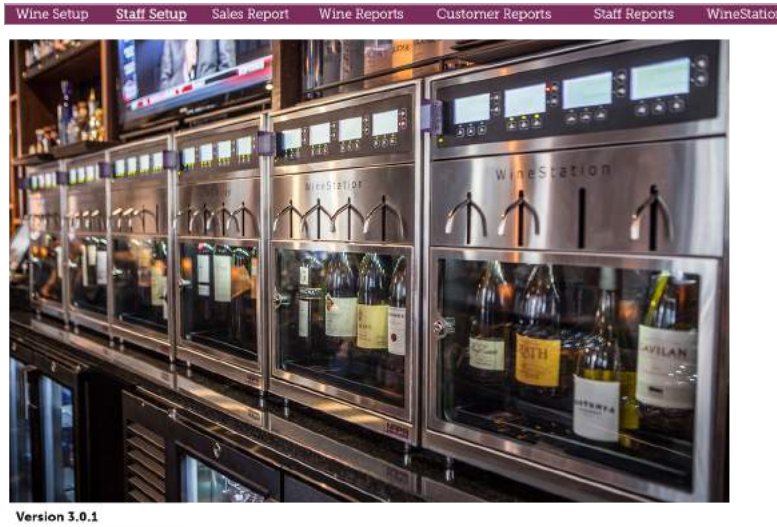

From the Staff Setup screen, you will be able to enter authorized staff members into the database and assign Smartcards to staff members.

- a. To begin, select NEW button to begin adding staff member.

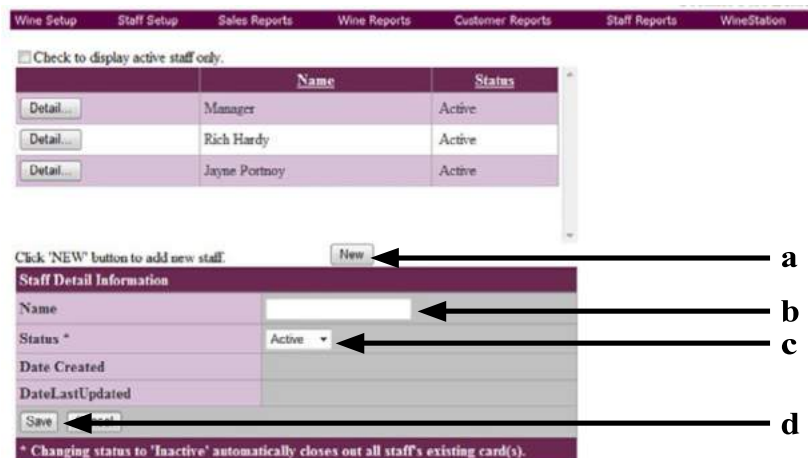

| | Name | Status |
|--|---------------|--------|
| <input type="button" value="Detail..."/> | Manager | Active |
| <input type="button" value="Detail..."/> | Rich Hardy | Active |
| <input type="button" value="Detail..."/> | Jayne Portnoy | Active |

Click 'NEW' button to add new staff.

Staff Detail Information

Name:

Status *:

Date Created:

DateLastUpdated:

* Changing status to 'Inactive' automatically closes out all staff's existing card(s).

GETTING STARTED - Continued

- b. Enter the name of the staff member.
- c. Change Status to Active. **Note:** Staff Member can be made “Inactive”, when the employee status changes or leaves the company.
- d. Click Save. You are now ready to create Staff Cards.

Step Five: Creating Staff Smartcards

- a. Make sure that Omnikey Smartcard Reader/Writer is plugged into the USB port.
- b. Exit the WineStation portal and return to your desk top.
- c. Select the AccuServe Smartcard icon.
- d. Enter Username: **idsop** and Password: **vintage**
- e. Insert a smart card into the reader. The software detects a blank card and the screen displays **Blank Card Detected**.
- f. Select the Staff Card tab.
- g. Issue a Manager Card first.
 - i. Select Card Type: Manager

WARNING: In the following step, do not remove the Smartcard until the screen indicates card has been updated. The card will be damaged if you do not wait.


- ii. Click the Create New Card button. The software will write to the card. Status messages will be displayed as the card is written to.

GETTING STARTED - Continued

Now you are ready to create as many Staff Cards as desired. To create a Staff Card:

1. Insert card into card reader.
2. Specify the Staff Member by clicking on the down arrow next to this field.
3. Specify the card Type (access rights) by clicking on the down arrow next to this field
 - a. **Manager Card:** enables all access (both pouring and service)
 - b. **Pour Card:** allows staff member to pour
 - c. **Service Card:** allows staff member to replace wine bottles or gas tank, but will not enable staff to pour.
4. Click on the Create NEW Card.

NOTE: Your AccuServe Smartcards, on Premier PLUS systems, can be also be created in Quick Card, Gift Card, Standard Card, Table/Time Card and Premier Card formats. For more information, these card types see the Appendix.

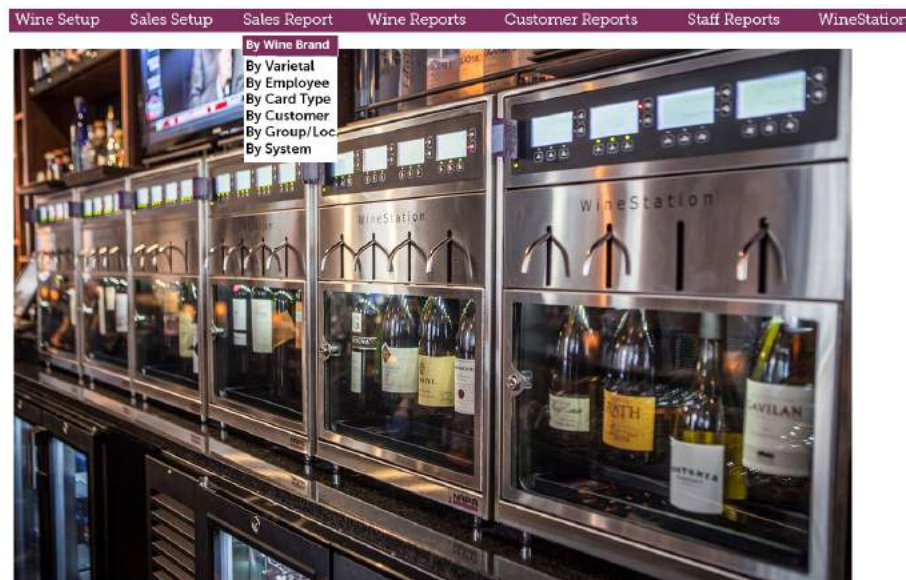


Step Six: Reporting

From the Wine, Customer and Staff Reports tabs, you will be able to access a wealth of reporting pertaining to Wine Sales and Customer Reports.

GETTING STARTED - Continued

Step Seven: WineStation Functionality

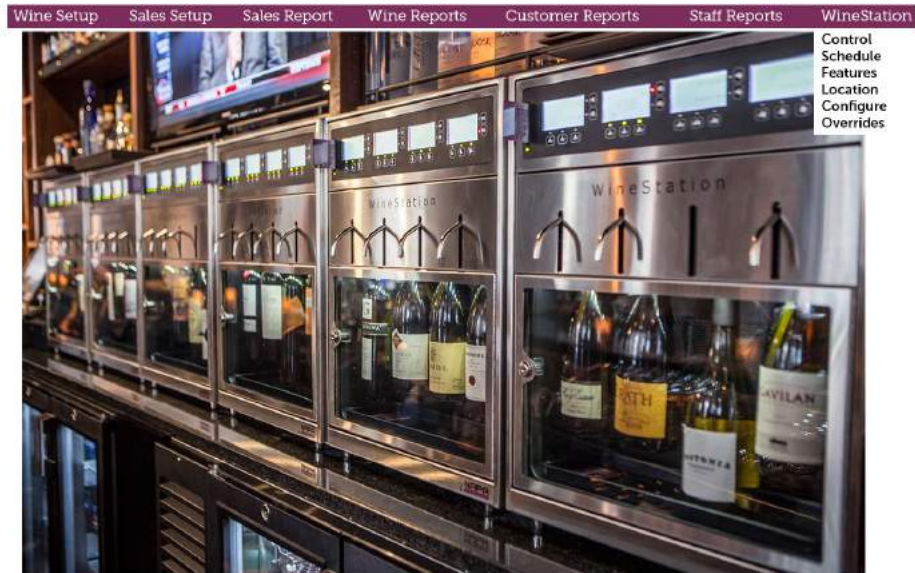

From this section in your wine database, you will be able access numerous features and set controls.

1. Control Page.



- a. From the Control Page, you can Open and Close your WineStation.
- b. From this same page, you can also stop and start Happy Hour.

GETTING STARTED - Continued

2. Schedule Page

| Location Scheduling | |
|-------------------------------------|-------------|
| Schedule Happy Hour | Disabled |
| Start time: | 5:15 PM |
| Stop time: | 7:00 PM |
| Message | Happy Hour! |
| Schedule Wine Bar Hours | Disabled |
| Open time: | 9:00 AM |
| Close time: | 2:00 AM |
| Lights on when closed: | Disabled |
| <input type="button" value="Edit"/> | |

By selecting the Edit Button, you may:

- Enable/disable Happy Hour
- Select the time Happy Hour will begin and end
- Enable/disable wine bar hours
- Choose the time when your WineStation will Open and Close

3. Features Page

| Location Features | |
|-------------------------------------|---|
| Temperature scale: | °F |
| Language: | English |
| Currency format (symbol = \$): | \$12 ²³ |
| Currency symbol: | \$ |
| Pour Limits | Disabled |
| Amount: | 5.00 |
| Minutes: | 300 |
| Max. pours per card insert: | 8 |
| Card type: | Smart Card |
| Options: | Courtesy pour enabled. Partial pours enabled. Display "Amt Due \$12.34" |
| <input type="button" value="Edit"/> | |

By selecting the Edit button, you may:

- Chose Temperature Scale, Fahrenheit or Celsius

GETTING STARTED - Continued

- b. Choose currency format (i.e.: 12, \$12, \$12.00)
- c. Choose currency symbol
- d. Enable/Disable pour limits
 - i. You may set pour limits by ounces
 - ii. You may set pour limits by minutes
- e. Choose card type

4. Location Page



- a. From this page, you can assign location to your WineStation(s).

5. Configure Page



| | Location | System Name | Host Name | IP Address | Service Type | Service Number | Service Revision | Accuserve Revision |
|----------------------|-----------------|---------------|-----------|--------------|--------------|----------------|------------------|--------------------|
| Edit | Napa Technology | WineStation 1 | WSPC308 | 192.168.5.50 | SDS | 3 | 3.0.0.2 | rev.3.5.0.3 |

[Reorder modules.](#)

- a. This function allows you to edit and/or create new locations for your WineStation. This is only applicable if you have numerous Master units in operation to support separate configuration

GETTING STARTED - Continued

6. Override Page

| Location Override Details | |
|-------------------------------------|---------------|
| Happy Hour Override | Disabled |
| Discount | 10% |
| Wine Description Override | Disabled |
| Line 1 text: | |
| Line 2 text: | |
| Line 3 text: | |
| Line 4 text: | |
| Pour button text override | Disabled |
| Left button: | Taste Only!!! |
| Center button: | |
| Right button: | |
| Pour button volume override | Disabled |
| Left button: | 1.00 Oz |
| Center button: | 0.00 Oz |
| Right button: | 0.00 Oz |
| <input type="button" value="Edit"/> | |

← a

← b

← c


← d

This page will allow you to make updates/edits to WineStation information that will reconfigure all options at once:

- a. Enable/Disable Happy Hour
- b. Edit Wine Descriptions/LCD Text
- c. Edit Pour Button Text
- d. Change Pour Button Volume

ATTACHING CLEAN-POUR DISPENSING HEADS

1. Clean-Pour Head Overview:

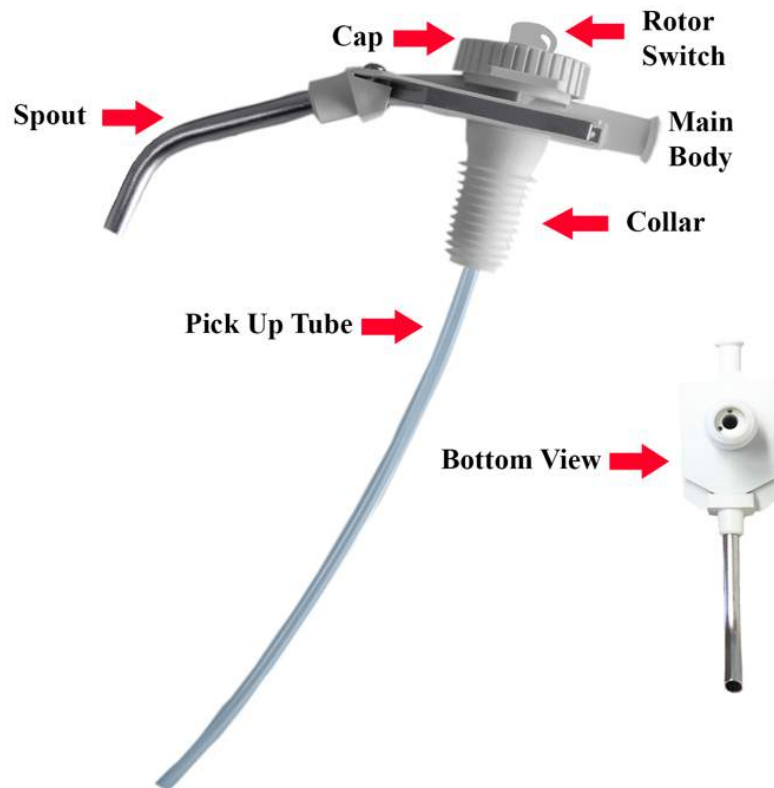


Important: When carrying around bottles with the dispensing heads attached, always hold the bottle itself (and not just the head), as an extra safety precaution.

WineStation.

UNIVERSAL CLEAN-POUR DISPENSING HEAD USE AND CARE GUIDE


CLEAN-POUR DISPENSING HEAD ANATOMY

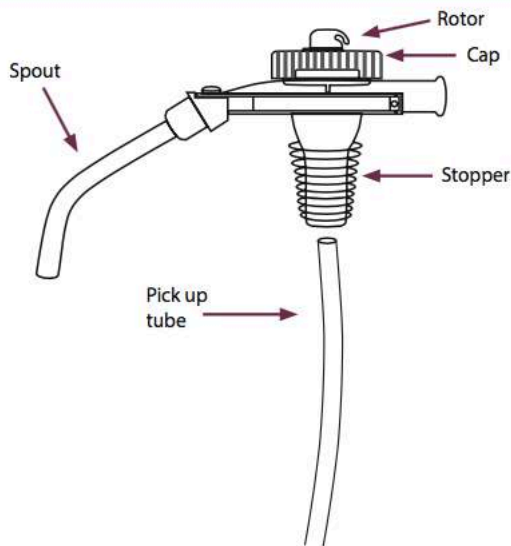

1 ATTACHING THE PICK UP TUBE

Remove the cap from the head body.


Insert a clean pick up tube into the bottle (it is normal for the upper end of the tube to extend beyond the tip of the bottle at this point). Insert the upper end of the pick up tube firmly into the opening on the bottom of the head, as shown in the Clean-Pour Dispensing head anatomy diagram. The tube will wrap around the inside of the bottle to allow for complete depletion of the liquid from the bottle. Push the head with stopper into the bottle and then tighten the cap back onto the head body.

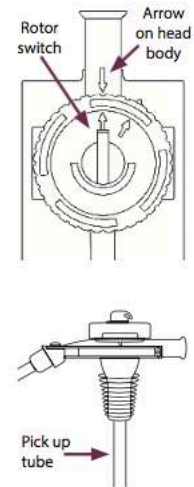

Assure the cap is properly mounted, and the rotor switch is in the correct position, with arrows at 12 and 1 o'clock.

2 INSTALL HEAD ONTO BOTTLE

Next, carefully insert the dispensing head (with the pick up tube attached) into the bottle. Press down on the head with one hand. Rocking back and forth will help tighten...

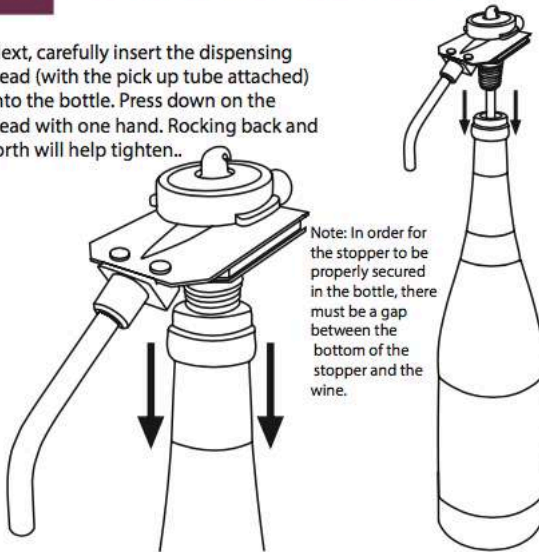


3 CHECK & SECURE

Verify the Clean-Pour head is secure by lifting the bottle 1-2" in the air, holding it only by the head to check if it holds the bottle properly.

If the head becomes loose, remove from bottle, wipe the head and the inner bottleneck dry, remove the cap from the head body, push the head with stopper into the bottle and then tighten the cap back onto the head body.

If the stopper is not going in far enough into the bottle, moisten the stopper and press it back in tightly. If the stopper is going in all of the way but not staying in, wipe the moisture from inside of the bottle and press it back in tightly.

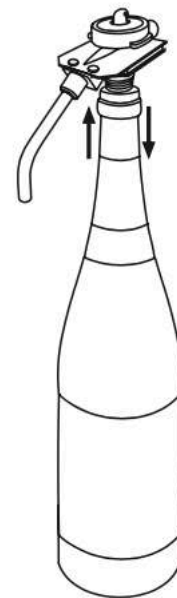


CLEANING & CARE



To assure your WineStation operates at the highest level of efficiency, you should clean the Clean-Pour Dispensing heads regularly.

- The Clean-Pour Dispensing head requires no more than either a warm water rinse or a run through a dishwasher.
- First, remove the pick up tube. Then, remove the cap from the head body by turning the cap counter clockwise. The cap will pop off.
- Place all three pieces in the dishwasher (do not use sanitizer) or rinse with warm water.
- Before replacing the cap, spray a small amount of silicone spray beneath the cap (see manual).
- To secure the cap, re-position the cap on the head, with the triangular pointer on the side of the cap pointing towards the arrow on the head body as shown. Push the cap down and turn it clockwise. Line up the rotor switch (at the center of the cap) with the arrow on the head body.

Removing the Cap:

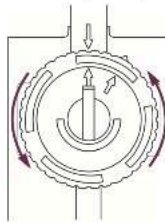

Repositioning the Cap:

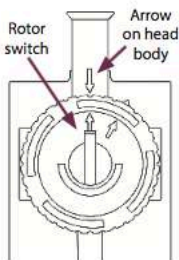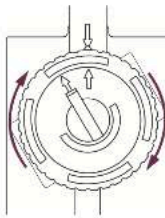

CLEANING & CARE

- The stopper can easily be removed from the dispensing head by simply twisting clockwise. The stopper is dish washer safe.
- The new patented stopper will also fit onto any Clean-Pour Dispensing head.

ONLINE CUSTOMER TUTORIAL VIDEOS

To view the online customer tutorial videos and to download the operating manual, visit:

www.napatechnology.com/selfhelp/


Simply create an account and log in. Once your account is created, you will have unlimited access to the tutorial videos and self-help guides.

For further assistance, contact Napa Technology Customer Support by calling 1.800.603.6550 or emailing support@napatechnology.com

LOADING AND CHANGING BOTTLES

1. Insert a **service card** or **manager card** into the WineStation.


- Insert the card with the chip forward and to the right (towards the green light).
- Insert the card all the way into the reader slot.
- Leave the card in the reader until you are done.

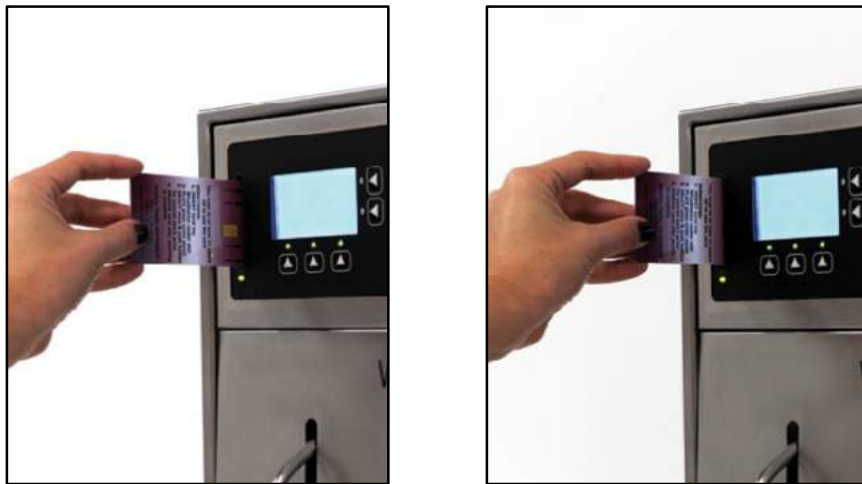

2. If you are using a manager card, select **"Service Mode"** on the desired position:



3. Select "Bottle Service":

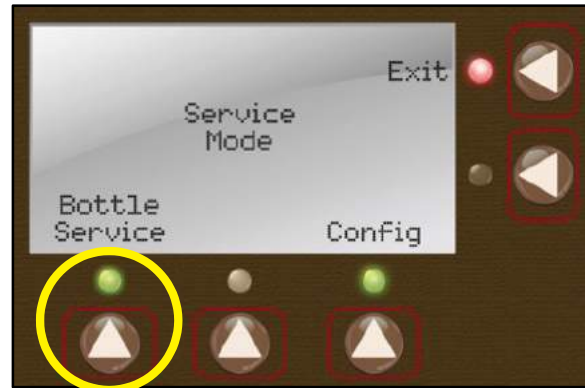


4. Open the compartment door and spout cover. To remove the old bottle (if exists), hold it by the head (not by the bottle itself) and pull it straight out towards you.

5. If you are loading a bottle of the same product, select "Refill Bottle":



If you are loading a bottle of a different product, select "New Bottle":



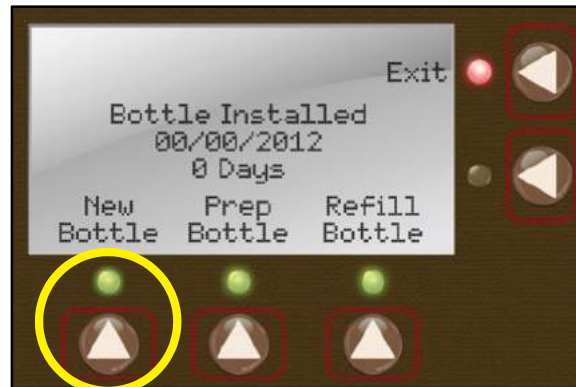

If you pressed "New Bottle", the red light on the barcode scanner will **turn on**.

Pull out the scanner (for convenience), and scan the bottle's barcode label, as shown:



Assure serial port connection is secure.




For best results, hold the scanner 1" away from the label, at a 45 degree angle (or you may scan the shelf label of the product, if more convenient.)

New Bottles may be updated and added into the WineStation by either using the hand held Barcode Scanner connected to your lap top (USB port) OR at the WineStation unit (Serial Port). To load New Bottles at the WineStation you will want to connect the hand held Barcode Scanner to the serial port located under the Spout Cover as shown.

Once you have connected the Barcode Scanner, a red light on the scanner will appear. Now you are ready to scan the bottle, as shown above. The light on the scanner will turn off once the barcode has been scanned. The LCD screen should now display the updated bottle information. Either continue as needed or detach the Barcode Scanner from under the spout cover.

- Slide the new bottle in holding it by the head (not by the bottle), as shown:

If the head does not go in all the way, check that the cap is properly mounted and that the rotor switch is in the correct position (see the "Cleaning and Care" section for details).

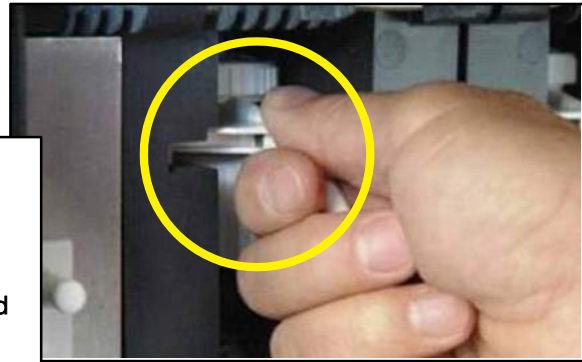


Close the spout cover and bottle compartment door:




- Begin by pressing the "Purge" button. This will purge any air trapped inside the bottle, displacing it with food-grade nitrogen or argon. If the bottle was less than full to begin with, press the "Purge" button several times to complete the purge.



8. Hold a glass under the spout and press "Test". A very small amount of liquid will be poured, allowing you to smell/taste the product and make sure it is good. The "test" also fills up the pickup tube, so that the first customer pour will be accurate.

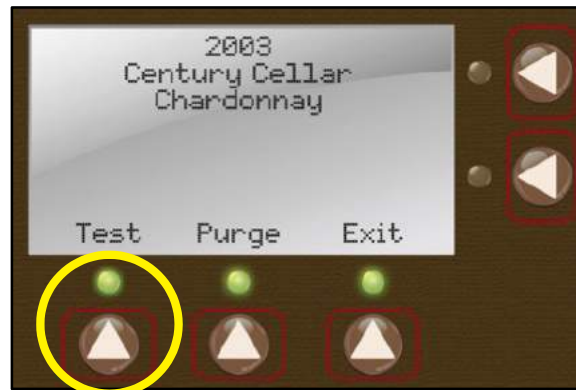

9. When you are done, press "Exit":

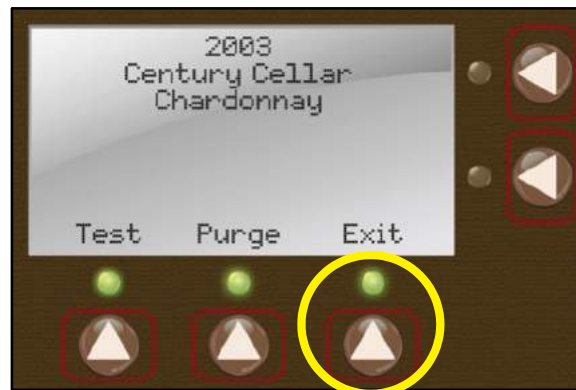

10. To install a bottle in another position, leave the card in and repeat steps 2 – 9 above. Remove your card when you are done.

PREPARING BOTTLES OUTSIDE OF THE SYSTEM

The WineStation allows you to prepare bottles outside of the system, with the dispensing heads attached, to facilitate future replacements. The bottles will remain preserved for up to 14 days, and can then be quickly inserted into the system as required.

The “Prep” function also allows you to make a small “test” pour of existing products in the machine, to make sure that they are still good. (Note, the date displayed is the date of the last occurrence of either the New Bottle or Refill Bottle button being engaged.).


1. Insert a **service card** or **manager card** into the WineStation.
2. If you are using a manager card, select **“Service Mode”** on the desired position.
3. Temporarily **remove** an existing bottle from any position, and press **“Prep Bottle”**:



4. Insert the bottle you wish to prepare into the position, and then perform a “Test”, “Purge” and “Exit”, as you would do with a new bottle (see steps 6 – 9 in the previous section, “Loading and Changing Bottles”, for more details). Repeat the above for any additional bottles you may wish to prepare.
5. Take the prepared bottle(s) out, return the original bottle and press “Exit” (there is no need to scan the original bottle in, because the bottle preparation does not affect the screen display).
6. For best results, store the prepared bottle(s) in a cool, temperature-controlled place, such as a fridge, cellar or a wine cooler.

DISPENSING WITH A STAFF SMARTCARD

1. Insert a manager card or pour card into the WineStation (if you are using a manager card, press "Dispense Mode").
The words "Authorized Employee" will appear on all the positions:

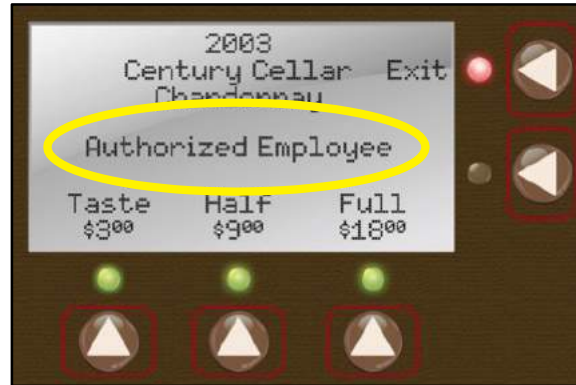

2. Hold a glass under the spout of the selected position, and press the pour button:



For a smoother pour,
let the spout touch the
glass from the inside.




- A measured amount of liquid will be dispensed. Hold the glass in place until the pouring is finished and until the final "puff" clears the remaining drops from the spout.

3. When you are finished, remove your card.

DISPENSING WITH A CUSTOMER SMARTCARD

1. Insert a customer card into the WineStation.
2. The card balance will appear on all the positions:

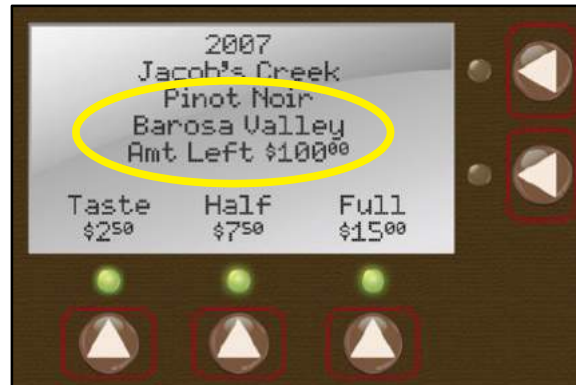

3. Hold a glass under the Spout and press the pour button. A measured portion will be dispensed, and the card balance will be adjusted (reduced) accordingly.


Note:

- If there is less than a full portion remaining in the bottle, the system will pour the remaining liquid and charge the customer the proportionate amount.
- If the card balance is insufficient for a full portion, the system will pour a smaller amount depending on the balance remaining on the card.


4. When you are done, remove the card.

ADJUSTING THE TEMPERATURE

1. Insert a **service card** or **manager card** into the WineStation (if you are using a manager card, select **"Service Mode"**).
2. Press **"Adjust Temp"** on any position (the temperature is set for all four bottles).

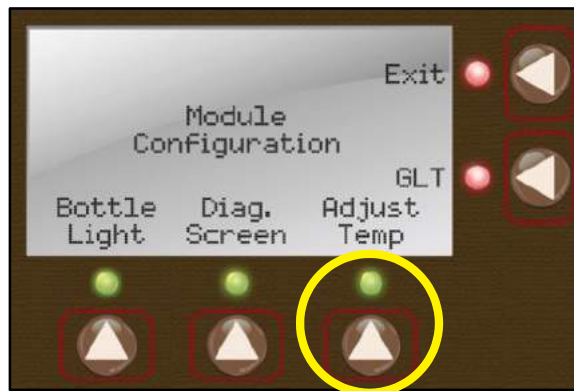

3. Use the arrows to select the desired temperature. When you are done, press **"Save/Exit"**.

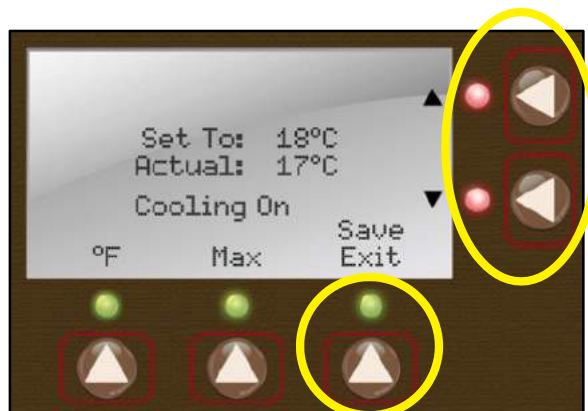


- To change the display from Fahrenheit to Celsius, press the **"F"** or **"C"** button (as the case may be).
- Press the middle button to turn the fan **"Off"**, **"On"**, or set it to **"Max"**. Typically, the cooling should always remain **"On"**.

NOTE: To assure that condensation does not gather, it is recommended to remove and drain the internal drip tray weekly. In summer months/higher temp regions, this may be required more frequently.

CREATING, UPDATING AND CLOSING CUSTOMER CARDS

1. Creating a New Card:


- a. Insert a blank card into the reader.
Wait for the “Blank Card Detected” message to appear:

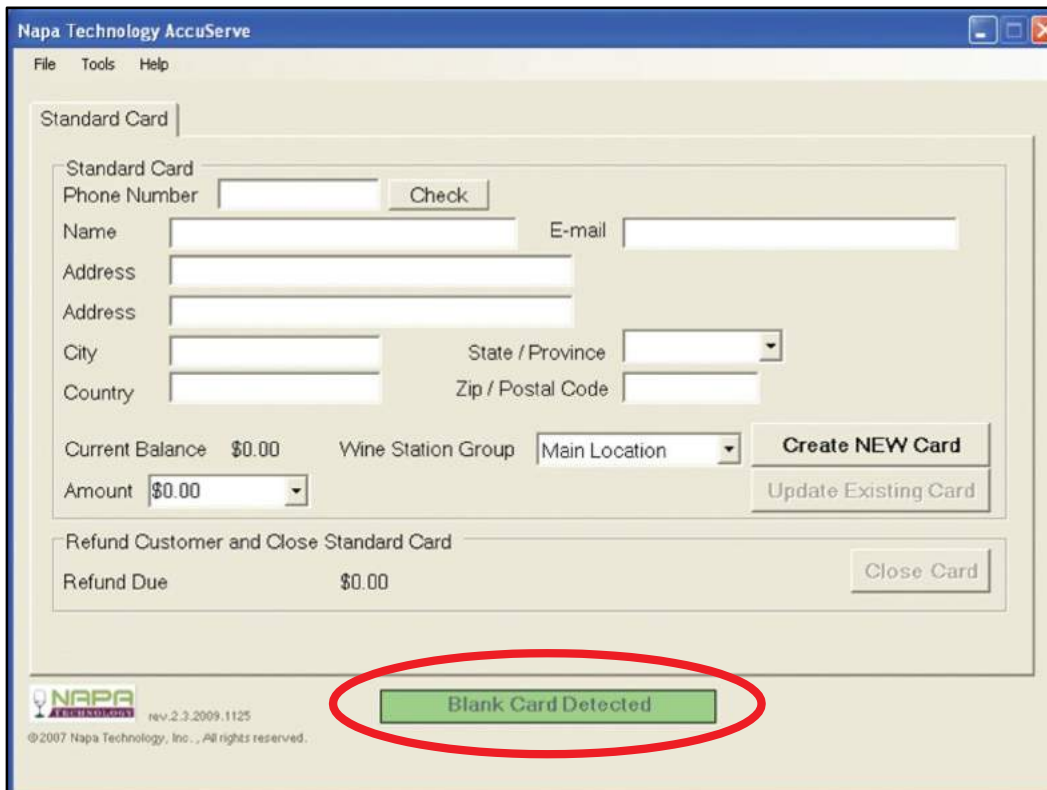

The screenshot shows the 'Napa Technology AccuServe' application window. The main area is titled 'Standard Card' and contains several input fields and buttons. At the bottom of the form, a green button with the text 'Blank Card Detected' is circled in red. The interface includes a menu bar (File, Tools, Help), a 'Standard Card' section with fields for Phone Number, Name, E-mail, Address, City, State/Province, Country, and Zip/Postal Code. There are also fields for Current Balance (\$0.00), Wine Station Group (Main Location), and Amount (\$0.00). Buttons for 'Check', 'Create NEW Card', 'Update Existing Card', and 'Close Card' are visible. The footer contains the NAPA logo, version information (rev. 2.3.2009.1125), and copyright notice (© 2007 Napa Technology, Inc., All rights reserved.).

- b. Enter the customer’s phone number (10 digits, no special characters. For example: 1234567890).
- c. Click “Check”. The system will check if this phone number already exists in the database. If so, the relevant information (name, address, etc.) will automatically be displayed. You may take this opportunity to review and update it, if needed.
- d. Enter any additional information which the customer is willing to provide, in the appropriate fields (name, address, postal code, email, etc.).

- e. Select the dollar amount that the customer has paid from the drop-down menu. If the relevant amount is not in the menu, you can enter it manually (in that case just enter the numbers, without the dollar sign).

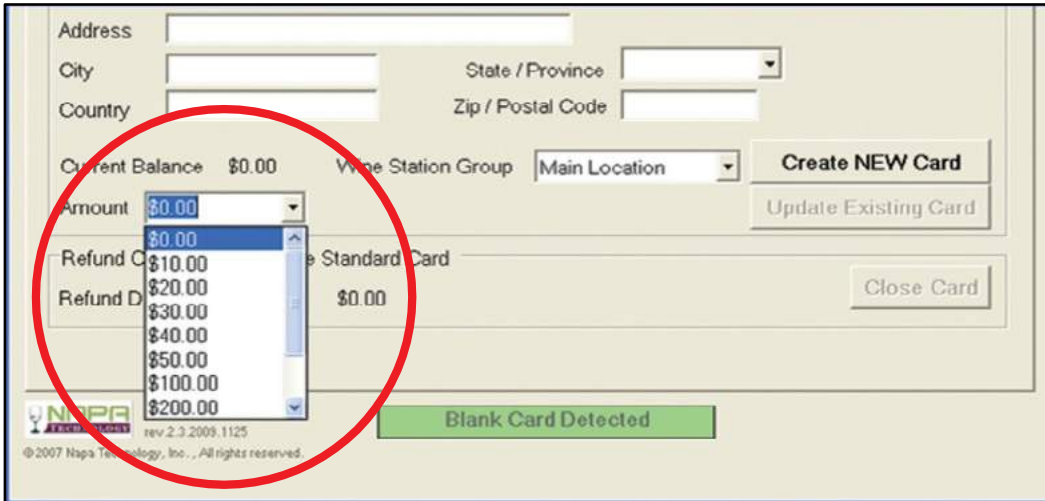

Address

City State / Province

Country Zip / Postal Code

Current Balance \$0.00 Wine Station Group **Create NEW Card**

Amount

Refund Customer and Close Standard Card

Refund Due \$0.00

Blank Card Detected

NAPA TECHNOLOGY rev 2.3.2009.1125 © 2007 Napa Technology, Inc., All rights reserved.

- f. Click **“Create NEW Card”**.
Wait for the **“Standard Card No. ___”** message to appear.



Current Balance \$0.00 Wine Station Group **Create NEW Card**

Amount

Refund Customer and Close Standard Card

Refund Due \$0.00

Standard Card No. 3

NAPA TECHNOLOGY rev 2.3.2009.1125 © 2007 Napa Technology, Inc., All rights reserved.

The card has now been created.
You may remove it and give it to the customer.

2. Updating a Card:


a. Insert the card into the reader.

Wait for the **"Standard Card No. ___"** message to appear:



The screenshot shows a web interface for managing a card. At the top, it displays 'Current Balance \$0.00' and 'Wine Station Group Main Location'. There are buttons for 'Create NEW Card' and 'Update Existing Card'. Below this, there is a section for 'Refund Customer and Close Standard Card' with a 'Refund Due' of '\$0.00' and a 'Close Card' button. At the bottom, a green box displays 'Standard Card No. 3', which is circled in red. The footer includes the NAPA logo, version 'rev 2.3.2009.1125', and copyright information for Napa Technology, Inc.

b. To add a **dollar amount** to the card, select the amount from the drop-down menu or enter it manually, as needed. Enter the amount to be **added**, not the total (for example, if the card has \$5 and you wish to add \$20, select "\$20.00").

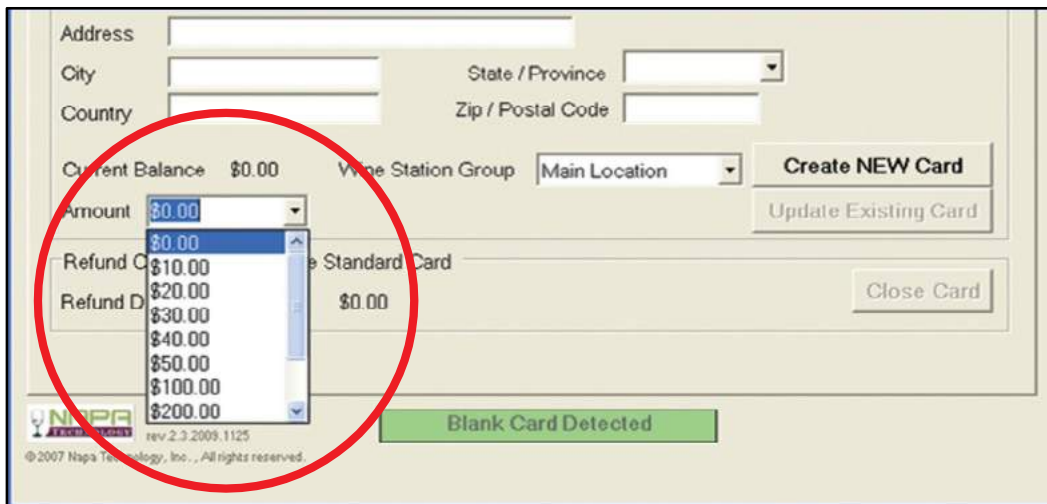

The screenshot shows the same web interface as above, but with the 'Amount' drop-down menu open. The menu lists options: '\$0.00', '\$10.00', '\$20.00', '\$30.00', '\$40.00', '\$50.00', '\$100.00', and '\$200.00'. The '\$0.00' option is currently selected. A red circle highlights the entire drop-down menu. A green box at the bottom of the interface displays 'Blank Card Detected'. The footer information is the same as in the previous screenshot.

c. To update any other information (name, address, etc.), simply enter it in the appropriate field.

d. Click **"Update Card"**.

Wait for the **"Standard Card No. ___"** message to re-appear:



The screenshot shows a web interface for managing customer cards. At the top, there are fields for 'Current Balance' (\$0.00), 'Wine Station Group' (Main Location), and 'Amount' (\$0.00). There are buttons for 'Create NEW Card' and 'Update Existing Card'. Below this, there is a section for 'Refund Customer and Close Standard Card' with a 'Refund Due' field set to \$0.00 and a 'Close Card' button. At the bottom, a green message box displays 'Standard Card No. 3', which is circled in red. The footer includes the NAPA logo, version information (rev 2.3.2009.1125), and copyright notice (© 2007 Napa Technology, Inc. All rights reserved.).

The card has now been updated.
You may remove and return it to the customer.

Note:

- You can have multiple customers with the same name, but not with the same phone number. Each phone number can only be assigned to one customer.
- A customer can have multiple cards at any given time. There is no need to close an existing customer card in order to create a new one for the same customer.

3. Closing a Card (Creating a Blank Card):

a. Insert a card into the reader.

Wait for the "Standard Card No. ___" message to appear:



b. Click on "Close Card":




c. The following warning message will appear.

To confirm that you want to close the card, click "Yes":



(If the above message does not appear, you can try closing the card by selecting the "Close Card" option from the "Tools" menu, at the top of the screen).

d. Wait for the “Blank Card Detected” message to appear:

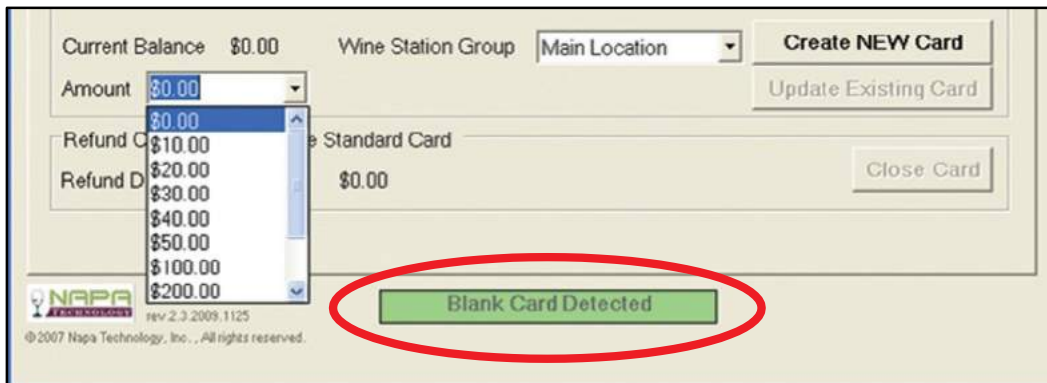

You have now created a blank card.
You may re-program this card as needed.

Note:

- The “closing” of a card simply turns the particular card into a blank card. It does not affect the customer information stored in the database.
- To close a card which is not physically available (such as a lost or stolen card), please contact Napa Technology.

CLEANING AND CARE

1. WineStation System:

- ONLY use a damp cloth with Soap and Water or a mild stainless steel cleaner on the Stainless Cabinetry. Avoid harsh cleaners and Windex on all Stainless elements. Glass cleaners can be used on the glass of the door.
- Submerge the tips of the spouts in a glass with warm water as needed, to clean any remaining drops that may have accumulated at the tip of the spouts. Do this regularly at the end of each day.
- The drip trays (internal standard, external optional) must be emptied periodically for optimal operation, by simply removing and discarding any fluid buildup. Drip trays may be washed in warm water and mild detergent as needed and dried thoroughly before returning to position.




NOTE: To assure that condensation does not gather, it is recommended to remove and drain the internal drip tray weekly. In summer months/higher humidity, this may be required more frequently.

- The LCD touch panel may be wiped with a damp clean cloth, as needed. Do not use chemicals or any abrasive materials. Be careful not to use sharp objects that may damage the surface of the touch panel or LCDs.
- Do not use chemicals or abrasive materials to clean any part of the WineStation.

2. Dispensing Head Cleaning Instructions: (change photos)

It is recommended to clean the heads and pick up tubes with EACH bottle change.

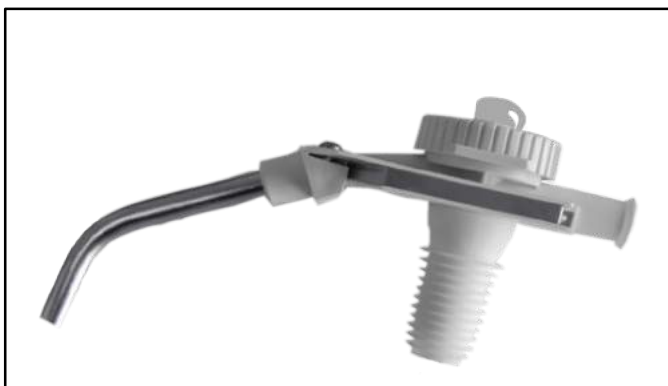

CLEANING AND CARE



To Clean the dispensing head follow the following steps:

- a. Remove the pick up tube and discard.
- b. Remove the cap from the head body by turning the cap counter- clockwise. The cap will pop off.
- c. Both the cap and the head body may be placed in a dishwasher and cleaned using a normal wash cycle. Avoid high heat dishwashers, and sanitizers when washing Universal Clean Pour Dispensing Heads.
- d. After washing, the cap can be reattached to the head body. A small amount of lubricant spray should be applied to the gasket under the cap to ensure proper rotation. Only the food-grade silicon provided by Napa Technology is recommended.
- e. A fresh pick up tube can now be attached to the bottom of the head body.

NOTE: For International markets, a silicon lubricant is provided by Napa Technology and should be applied with a Q-tip or small brush, in the same manner as instructed with the spray.

NOTE: Do not attempt to remove steel spout, as you may damage the Universal Clean Pour Head.


CLEANING AND CARE

- f. Before reattaching the cap, the rubber top (as shown below) must be lubricated with a small spray of food-grade silicone.

NOTE: For International markets, a silicon lubricant is provided by Napa Technology and should be applied with a Q-tip or small brush, in the same manner as instructed with the spray.




- g. Re-position the cap on the head, as follows:

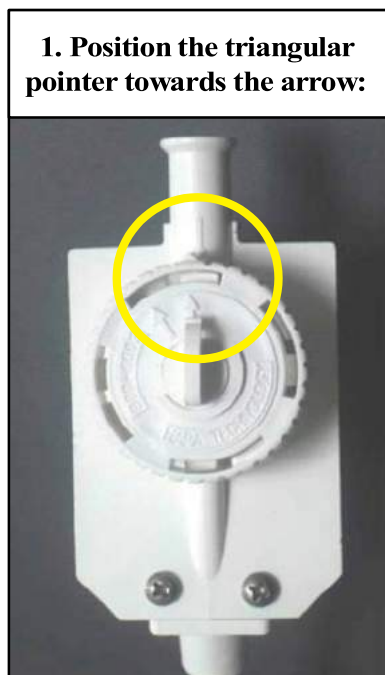

CLEANING AND CARE

- h. Check that the rotor (at the center of the cap) is aligned with the arrows and points toward them, as shown:

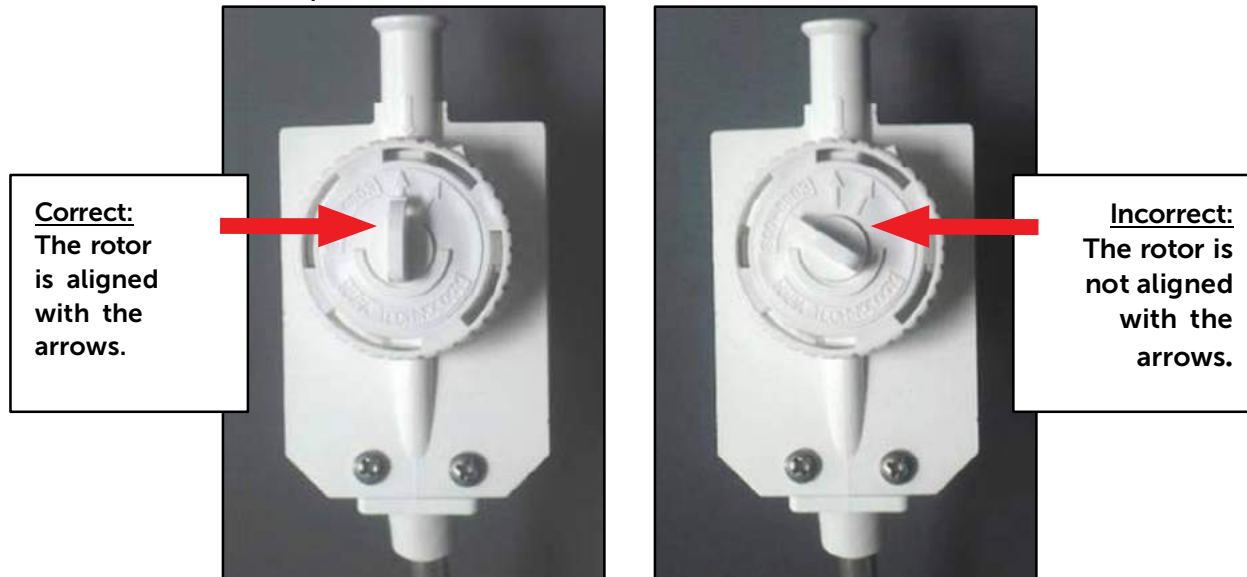

- i. Store the heads and tubes in a clean, closed container while they are not in use. When in storage, always make sure the collar is fully un-tightened (all the way up touching the head), to minimize any unnecessary pressure on the gaskets.
- j. To keep the WineStation operating properly and allow the Universal Clean-Pour Dispensing Heads to fit securely when inserted, the "O" rings found inside the bottle bay (as shown below) need to be lubricated with a small spray of food-grade silicone.



ADDITIONAL FUNCTIONS

By pressing the “Config” button on the Service Mode menu, you may access the following functions:

1. Position Config:

Allows you to configure the **particular bottle position** you are working on.

- a. **Pour Detection:** Turns on/off the detection of the liquid during each pour. This should normally be set to “On”. If set to “Off”, the end of the bottle will not be detected, and would therefore need to be monitored manually.

Pour detection might only need to be turned off, for certain positions, if you are placing beverages other than wine (such as spirits) in that position. A red light will indicate that pour detection has been turned off. (Note: when the system is restarted, all the positions revert back to the default “on” mode.)

- b. **Adjust Bright:** Adjusts the brightness of the LCD screen for that position.
- c. **Adjust Contrast:** Adjusts the contrast of the LCD screen for that position.

2. Module Config:

Allows you to configure the **entire module (4 bottles)** you are working on.

- a. **Adjust Temp.:** Adjusts the temperature for the entire module. See “Adjusting the Temperature” section for more details.
- b. **Bottle Light:** Adjusts the brightness of the LED panel inside the bottle compartment.
- c. **Diag.:** Brings up various data for support purposes (for service technician use only).
- d. **GLT (Gas Leak Test):** Checks for gas leaks inside system (for service technician use only).

3. Misc.:

Includes a “Near Empty Flashing” function which flashes when the bottle is nearly empty. This function should typically remain “off”.

APPENDIX- PRODUCT SPECIFICATIONS

| Dimensions & Weight (4-bottle unit: SX, MX, EX, HX) | |
|---|--|
| Single System Width: | 19.7" [49.76 cm] |
| Single or Multi System Height: | 25.7" [65.28 cm] including 1" for leveling feet |
| Single or Multi System Depth: | 16.1" [40.90 cm] Dispensing spout extends 1.62" from cover |
| Single System Weight: | 85 lbs [38.55 kg] when empty |
| <p>Note: The WineStation modular design allows for the creation of larger designs in 4 bottle configuration. For example, 8 bottle and 12 bottle models are comprised of two and three 4 bottle units, respectively.</p> | |

| Cooling & Electrical (4-bottle unit: SX, MX, EX, HX) | |
|---|---|
| <p>Note: WineStation is shipped without leveling feet attached to the bottom of the unit and requires assembly. These leveling feet can be set to a minimum of 1 inch height. <u>Warranty is void if the leveling feet are removed.</u> TEC cooling optimization requires proper air intake and exhaust to achieve optimal cooling temps. Below are recommended clearances for standalone installations.</p> | |
| Required Clearances for Stand-Alone Installation: | |
| Top: | A minimum space of 2" [5.08 cm] |
| Sides: | No clearance required |
| Back: | 2.5" [6.35 cm] clearance for power and tubing access recommended, not required. |
| Bottom: | A minimum space of 1" [2.54 cm] |
| Operating Ambient Temp | Min 50°F [10°C] Max 75°F [23.9°C] |
| Internal (Wine Cabinet) Temperature | Up to 30°F [16.7°C] below ambient |
| Rating | IPXO (indoor or covered use only) |
| Venting | Recommend greatest possible clearance to allow ample airflow and exhaust, to achieve optimal cooling temps. |
| Cabinetry Installations | Fully enclosing WineStation in cabinetry will void Warranty. Exhaust requires full, uninterrupted escape. |
| Electrical Input | Master: 100-240VAC, 50/60Hz, 3.5A Expansion: 100-240VAC 50/60Hz, 2A |


APPENDIX- PRODUCT SPECIFICATIONS

| Cylinder, Gas (sourced separately) | |
|--|---|
| Inert Gas: | Ultra High Purity Argon (UHP 5.0) |
| Cylinder Size: | Cylinder is external, and size and quantity will vary based on number of bottle positions in use. |
| Cylinder Pressure (into regulator): | 3,000 PSI Max. |
| Cylinder Fitting (Valve) Required: | CGA 580 |
| Regulator Pressure (into the WineStation): | 35-40 PSI Max. (Regulator is supplied with the WineStation) |
| Note: When utilizing keg dispensing feature, regulator pressure may need to be calibrated until desired pouring volumes are achieved. Keg dispensing is not a standard feature. | |


| Control Console | |
|------------------|----------------------------|
| Console | Windows-based PC or laptop |
| Operating System | Windows 8 & 10 |
| HDD | At least 20Gb |
| Memory | At least 1Gb |
| Wireless | 802.11 b/g/n |
| Wired Ethernet | 10/100/1000Mbps |
| USB Ports | At least 2 |

| Peripherals and Accessories | |
|---|--|
| Wireless Router * | Linksys WRT120N Wireless Router 802.11b/g/n up to 150Mbps/10/100 Mbps Ethernet Port x4 |
| Desktop Smartcard Reader/Writer* | Omniquey 3121 |
| Handheld Barcode Scanner* | TYSSO BCP-5000 Portable Bar Code Data Collector |
| *Accessories standard in Premier Model Series | |


APPENDIX- PRODUCT SPECIFICATIONS

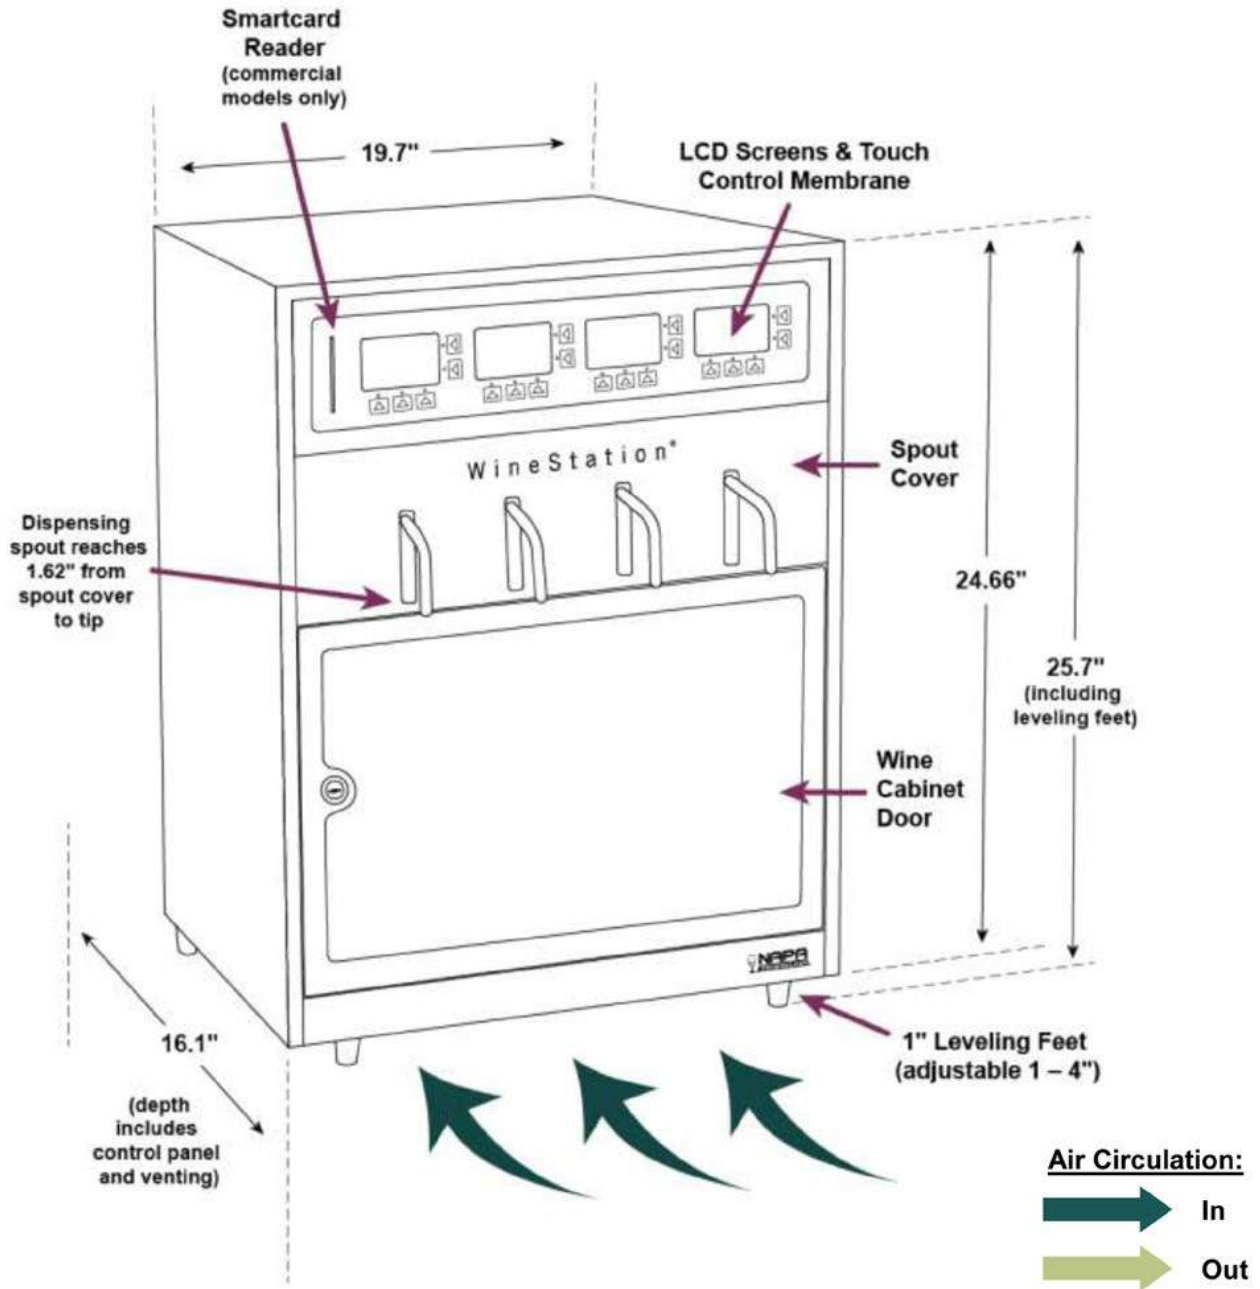

APPENDIX- PRODUCT SPECIFICATIONS

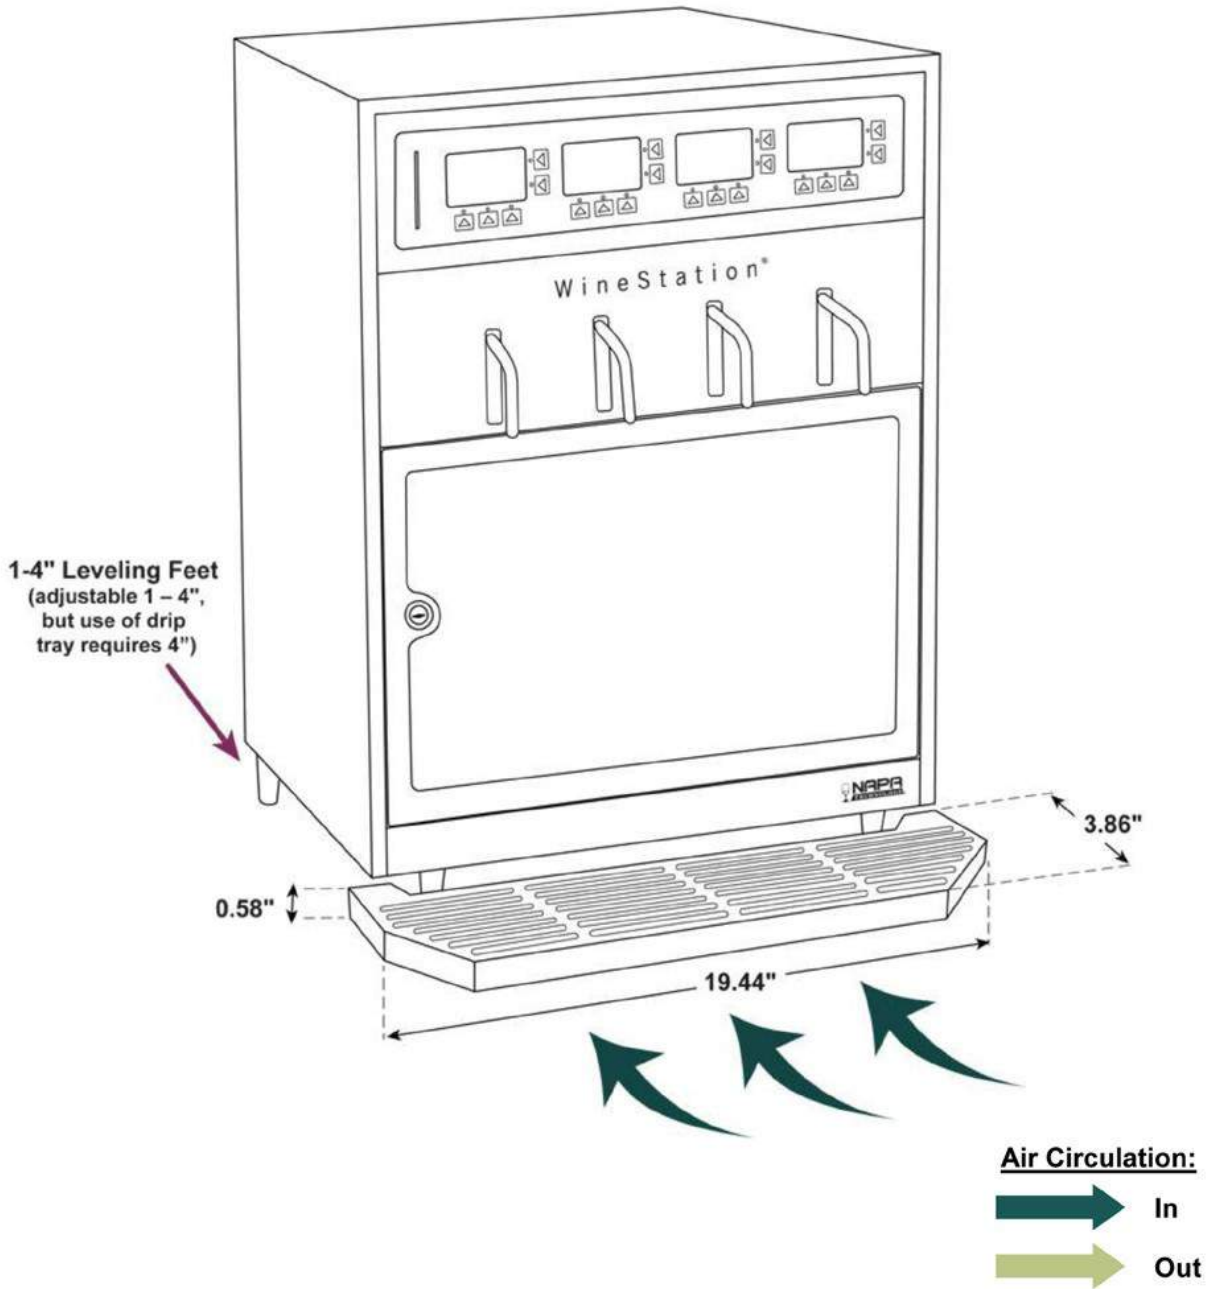

APPENDIX- PRODUCT SPECIFICATIONS

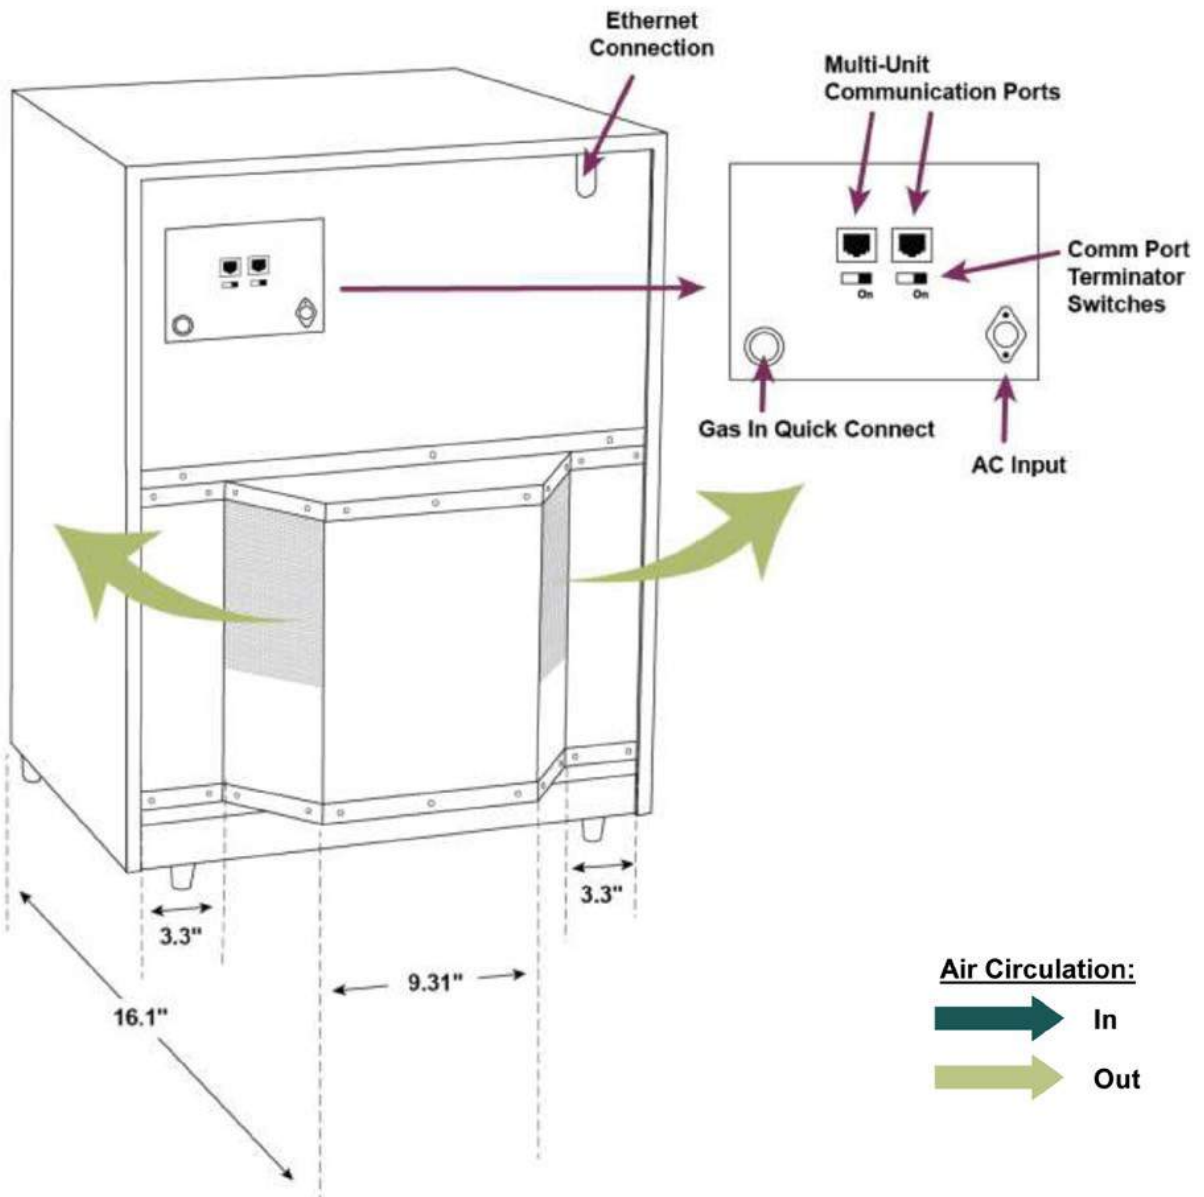

PREMIER PLUS SYSTEM LCD DISPLAY MODES

Bottle Service Screens



Dispensing Ready



Manager Mode




Service Mode



Bottle Service




New Bottle Scan

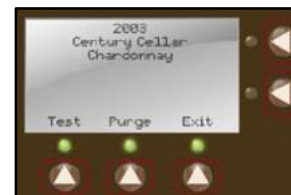


Purge/Test Screen

Config/ Position Config

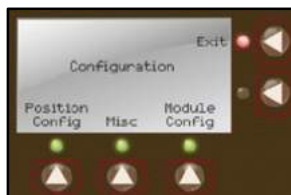


Configuration

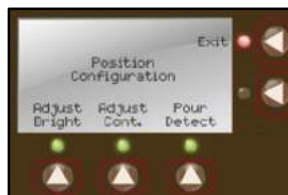

Position Configure



Adjust Display Brightness

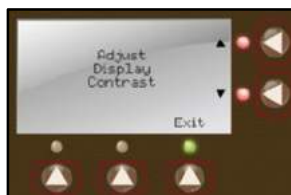

Adjust Display Contrast




Pour Detection On



Pour Detection Off

PREMIER PLUS SYSTEM LCD DISPLAY MODES

Module Configuration

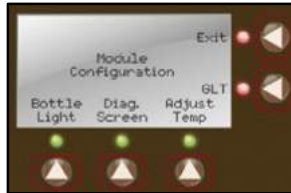

Module Configuration



Adjust Bottle Light



Adjust Temp/ Cooling On



Adjust Temp/ Cooling Off



Adjust Temp/ Cooling Max



Adjust Temp/ Celcius

ACCUSERVE SMARTCARD OVERVIEW

The AccuServe Smartcard technology, provides you with a broad range of opportunities to meet your business needs. All AccuServe Smartcards are reusable, once closed out and may be reprogrammed for any format.

Your AccuServe Smartcards fall into three groups of use; handled and transacted like 1) Pre Paid, 2) Tab/Non-Pre Paid* of for 3) Staff-Use Only.

Pre Paid Card Types:

Standard Card: This AccuServe Smartcard allows you the ability to populate with customer contact information (name, phone, address and email) and designed used to support Customer Loyalty programs, so that you may track customer history, spend, consumption etc. A phone number is required for the complete activation of this card.

Quick Card: This pre-paid/denominated card allows you quick and a convenient means to sell AccuServe Smartcards to customers. This card is best used in high volume environments and/or where capturing customer data is not necessary. This AccuServe Smartcard can be used repeatedly until balance is exhausted.

Gift Card: Similar to your traditional Gift Card, guests would purchase an AccuServe Smart card with a determined and prepaid denomination to be gifted to another future customer. Please note you will always need to activate check for Valid ID in all AccuServe Smartcard use.

Tab/Non-Pre Paid Types:

Tab Card: This AccuServe Smartcard affords the customer the ability to "start a tab" and credits the card for each pour. At the end of use, the customer would be assigned the outstanding balance for payment.

Table Card: Similar to a Tab Card, this AccuServe Smartcard allows you to assign a zero balance card to a guest(s) by assigning to a table number, in which the amount due (tab) would be allocated at the end of use/dining experience

Time Card: This AccuServe Smartcard card allows you to set an expiration date or limited time period for use (ex: Jan 1-Feb 1 or Wednesdays Only), and can support promotional periods or events.

Premier Card: This AccuServe Smartcard provides you with the ability to offer monthly billing statements to select guests, and would commonly be utilized in a Country Club or VIP scenario. You may set a monthly credit limit and expiration date to each card/guest. SAME AS Time Card, but with individual identity (name, phone, email, etc.), and can be set to expire at end of day, week, special event, or any other expiration date.

*for Premier PLUS model only.

ACCUSERVE SMARTCARD OVERVIEW - CONT'D

Staff Cards Types:

Employee assigned (Pour) Accuserve Smartcards will provide assigned members of your staff with the ability to pour from the WineStation and replace bottles only.

Employee assigned (service) AccuServe Smartcards will provide members of your staff with the ability to replace bottles and argon tanks only. This card will not allow dispensing.

Manager AccuServe Smartcards, allow assigned staff members to engage in all functions of the WineStation operation.

Creating Customer Cards:

Create a Quick Card:

1. Insert Card
2. Click on the Quick Card tab.
3. Select the \$ Amount by clicking on the down arrow next to this field
4. Select WineStation Location by clicking on the down arrow next to this field.
5. Click on the Create NEW Card button.
6. To verify that the Quick Card has been created, verify the following:
 - a. A message box will state "The currently inserted Card is a Quick Card!"
 - b. The Current Balance indicates the specified dollar amount.

Update an Existing Quick Card:

1. Insert card into Smart Card Reader.
2. Click on the Quick Card tab.
3. Select the \$ Amount by clicking on the down arrow next to this field
4. Select WineStation Location by clicking on the down arrow next to this field
5. Click on the Update Existing Card button.
6. To verify that the Quick Card has been created, verify the following:
 - a. A message box will state "The currently inserted Card is a Quick Card!"
 - b. The Current Balance indicates the new dollar amount.

Create a Gift Card:

1. Insert a blank card into the Smart Card Reader.
2. Click on the Gift Card Tab.

ACCUSERVE SMARTCARD OVERVIEW - CONT'D

3. Select the \$ Amount by clicking on the down arrow next to this field.
4. Click on the Create NEW Card button.
5. To verify that the gift card has been created, verify the following:
 - a. A message box will state "The currently inserted Card is a Gift Card!"
 - b. The Current Balance indicates the specified dollar amount.

Create a Standard Card:

1. Insert a blank card into the Smart Card Reader.
2. Click on the Standard Card tab.
3. Select the \$ Amount by clicking on the down arrow next to this field.
4. Select WineStation Location by clicking on the down arrow next to this field.
5. Enter the customer's phone number.
6. Click the Check button. This will check the phone number against the customer database. If the phone number is found in the database, the customers' information will be auto-populated.
7. Optional: Enter the customers' information for the rest of the fields.
8. Click on the Create NEW Card button.

Update a Standard Card:

1. Insert a blank card into the Smart Card Reader.
2. Click on the Standard Card tab.
3. Select the \$ Amount by clicking on the down arrow next to this field.
4. Select WineStation Location by clicking on the down arrow next to this field.
5. Enter the customer's phone number.
6. Click the Check button. This will check the phone number against the customer database. If the phone number is found in the database, the customers' information will be auto-populated.
7. Click on the Update Existing Card button.

Create a Tab Card:

1. Insert a blank card into the Smart Card Reader.
2. Click on the Tab Card tab.
3. Select the Credit Limit that you would like to extend to your customer.

ACCUSERVE SMARTCARD OVERVIEW - CONT'D

4. Select Tab Card Type by clicking on the down arrow next to this field:
 - a. Table Card: used to open a tab for a specific table.
 - b. Time Card: used to open a tab for a specified length of time.
 - c. Room Card: used to open a tab for a banquet room or hotel room or suite.
5. Select the Table/Seat/Room Number using the down arrow.
6. Select the WineStation Location by clicking on the down arrow next to the field.
7. Click on the Create NEW Card button.
8. To verify that the Tab Card has been created, a message box will state: "The currently inserted card is a Tab/Table Card!"

Create a Time Card:

1. Insert a blank card into the Smart Card Reader.
2. Click on the Time Card tab.
3. Select the Expiration Date by clicking on the down arrow to display a calendar.
4. Select the WineStation Location by clicking on the down arrow next to the field.
5. Select the \$ Amount by clicking on the down arrow next to this field.
6. Click on the Create NEW Card button.
7. To verify that the Time Card has been created, a message box will state: "The currently inserted card is a Time Card!"

To Re-use a Card (Create a Blank Card):

1. Insert card into card reader.
2. The Card Display at the bottom of the screen will tell you what type of card is inserted.
3. Click on the tab for the indicated type of card.
4. Click on the Close Card button at the bottom of the screen. Note: A Gift Card cannot be closed in this manner. For accounting purposes, a Gift Card must be closed using Tools 'Close Out Card. You must have rights to close a gift card.
5. The card is now a BLANK card.

TROUBLESHOOTING GUIDE - ALL WINESTATION MODELS

Before contacting Napa Technology for support, please check if the problem and solution are found below:

1. Machine is off, all LCDs are dark (Could be caused by a power outage.)

- a. Turn the system on using the on/off switch found on the front of the machine under the pour spout. This switch can be found on the left side.
 - If on/off switch does not work, check the breaker room.
- b. Wait 2-3 minutes for system to fully come up and for cards to start working.

2. LCDs are on, but cards don't work

What message is displayed?

- a. **"Invalid Card!" or "Card Not In Database!"**
 - If possible, try another card in the machine.
 - If multiple cards don't work, check network connectivity.
 - If only one card does not work, try inserting that card at the card-creation PC.
 - If you get an error message on the PC as well, the card may have been corrupted.
 - For a staff card: close the card, re-create it and try again.
 - For a customer card: validate the information given by the client (including card balance) and recreate the card.
- b. **"Invalid Group!"**
 - Staff card was created in a different store.
 - Close card, re-create in current store and try again.
- c. **"Invalid Client ID!"**
 - Not a valid card.
- d. **"Card In Use"**
 - Card has "card in use" flag on (probably due to pulling the card out too early).
 - Simply re-insert card reader while AccuServe is active. Any update function should correct (or close card and re-create).
- e. **No message**
 - Check that the card is all the way in and inserted correctly (chip forward and to the right)
 - Try other cards, to make sure it is not a problem with the specific card.
 - There should be a blue light under the drip tray of the master unit. If there isn't, the PC is not working. (Could be due to a power outage).

TROUBLESHOOTING GUIDE - ALL WINESTATION MODELS

In that case, restart the system as follows:

- Turn the entire system off using the on/off switch located under the spout cover.
- Wait 1 minute until all the LCDs are dark and turn system on again (with the same switch)
- Turn system on again (with the same switch).
- Wait 2-3 minutes for system to fully come up and for cards to start working.

3. Bottle won't go in / spout cover won't close

- a. Check that the cap and rotor switch are in the correct position.
- b. Check that the round plastic knob inside the position (at the top) is in the right position.

4. Cooling

- a. Cooling but not cold enough
 - i. This is most likely caused by the ambient (inlet) temperature exceeding the cooling systems ability to lower the temperature to the desired level.
 - ii. To verify check inlet temperature displayed on LCD #2 on the Diagnostic screen. The maximum temperature differential between the inlet temperature and the set temperature is approximately 30 degrees Fahrenheit or approximately 17 degrees Celsius.
 - iii. The only remedy to this condition is to lower the inlet temperature. This can be achieved by either moving the WineStation to a cooler environment or cooling the inlet air to the WineStation (This may be achieved by directing a fan to the WineStation air inlets.)
- b) No cooling
 - i. First check the status of the fan located inside of the wine compartment. If the fan is not turning, it is likely that the fan will need to be replaced. To further diagnose capture the diagnostic screen information from LCD#2. A fan and TEC board replacement service call will need to be scheduled.
 - ii. If the fan is turning, it is necessary to provide the diagnostic screen information from LCD#2. If the set temp from the diagnostic screen shows 99 degrees Fahrenheit (or 37 degrees Celsius), the hot side fan will need to be replaced. As a temporary fix, it may be possible to start the fan by manually turning the fan blade. If the set temp from the diagnostic screen shows the requested bay temperature and the TEC temperature is at the same level as the inlet temperature, then the TEC or the TEC board may need to be replaced. A service call will need to be scheduled.

TROUBLESHOOTING GUIDE - ALL WINESTATION MODELS

5. Empty bottle message/ Red light on in bottle position

- a. Check that the spout cover and door are fully closed (door should “snap” into position).
- b. For beverages other than wine (including water), set “Pour Detection” to “Off”.
- c. In case there is a cleaning agent residue on the head contacts, wipe the stainless steel head contacts with clean warm water and a clean cloth and then retry using the head.
- d. If the bottle appears empty, then this is a normal situation. Replace the wine bottle and reset the wine information by inserting your Manager (or Service) Smartcard into the WineStation card reader and selecting the Bottle Service menu after choosing Service Mode from the button panel.
- e. If the bottle is full, then the cause is that no liquid is being detected when a pour is being requested from the button panel. Remove the head from the WineStation. First, make sure that there is a pick-up tube attached to the dispensing head and that the head is properly secured on the bottle. Also make sure that both the spout cover and the front door is closed & locked before doing any kind of pour, including a test pour. If there is no time to apply the cleaning procedures at this time, proceed to temporarily turning off pour detection. (Described in next procedure.) Next, clean the stainless steel contacts located on the dispensing head. If this does not correct the problem, then carefully clean the “Pogo-Pins” located in the rear of the WineStation.
This can be accomplished by using the soft rubber in the back of a pencil. When carefully pushing on the Pogo-Pins they should be springy. If they are “sticky” they may need to be carefully cleaned using a “contact cleaner” and aerosol spray (these can be purchased at most hardware stores).
- f. To temporarily turn off Pour Detect insert the Manager (or Service) card and select Service Mode. Next select “Config” followed by “Position Config”. Then select “Pour Detect”. Select “off”. Please note that this will temporarily turn off pour detect. Pour detect is a unique feature of the WineStation and if turned off, will not know when the bottle has reached the “empty state”. As a result, a card could be over charged for wine that has not been poured. Turning off pour detect is a temporary state. It will automatically be turned back on if the system is restarted or powered on.
- g. Another area that will need regular care, is the “O” rings located on the gas stem in the very reach of the position where the dispensing head is inserted. Simply spray the “O” rings with a small spray of food-grade silicone.

6. Red lights flashing in all or many units

- a. This indicates a low gas pressure condition has been detected. All WineStations connected to this gas source will continue to pour normally for some period of time. However, the gas cylinder needs to be replaced as soon as possible.

TROUBLESHOOTING GUIDE - ALL WINESTATION MODELS

7. Red lights are on in all or many units and pouring is not possible from these units.

- a. This indicates that the gas pressure being delivered to the WineStations is too low for continued service. As soon as the gas cylinder is replaced the red lights will turn off and pouring can continue.

8. Red lights flashing in the lower row of Red Lights on one or more units of a Premier & Premier PLUS configuration

- a. In all new Premier & Premier PLUS systems when the bar is closed, there is an automatic test performed by the system to check the state of the gas system. The red lights will stop flashing when the bar is opened. Depending on the number of units in the configuration the, time interval for this test will vary. The default test period is 30 seconds. For larger configurations, it is increased to 5 minutes. If during this test period, it is determined that the gas pressure within a unit is dropping faster than normal, the red lights will start to flash. This flashing will only occur on the unit that has failed the gas test. This would indicate that this unit or in a particular position within this unit, has a gas leak higher than normal. The most probable cause is that the Universal Clean-Pour Dispensing Head has not been secured onto the bottle correctly. Examine the head and either properly secure the head or, if necessary, replace the head. The test can then be performed on this unit manually or by closing the bar will automatically be run again. In any case, the red lights will stop flashing when the bar is reopened.

9. Pouring is not working properly (too much being poured or not enough being poured)

- a. If this is occurring and is followed by an "Empty Bottle" message, even though the bottle is not empty (see above).
- b. If this is occurring without an "Empty Bottle" message, check the volume setting through the WineStation Portal and make sure that the volumes are set properly on the wine in question. If not set correctly, use the "View Pour Price" button and then edit the settings. If the volume settings are correct but the system is not pouring the correct volume, the unit may need to be recalibrated and Napa Technology support needs to be contacted.

10. Gas leaks & gas cylinder emptying too quickly

- a. If hissing can be heard, check where leak is coming from. If coming from cylinder, replace with a new cylinder.
- b. If leak is coming from gas regulator, call Napa Technology for replacement

TROUBLESHOOTING GUIDE - ALL WINESTATION MODELS

- c. If there is a suspected leak, the following procedure can be used to help isolate the cause.
- i. First, pop off quick disconnect from regulator on tank. Record settings on regulator. Turn off gas at the gas cylinder. If pressure readings on regulator drop, then there is a leak in the regulator.
 - ii. Disconnect the quick disconnect from the first WineStation. Turn off gas at the gas cylinder. If pressure readings on regulator drop, then there is a leak in the gas tubing from the regulator to the first WineStation.
 - iii. Remove all wine bottles from all of the WineStations. Pressurize the WineStations by reengaging gas tubing and turning on pressure. Once again turn off gas at the gas cylinder. Bring up the diagnostic screen on the WineStations by inserting manager or service card and selecting diagnostic screen from module configuration menu (this may vary depending on software version installed). Observe the second LCD screen (this is the screen that has TEC and temperature information) there is a pressure reading in the 2 position from the bottom left. If fully charged, it will read around 31 PSI. Wait about 2-5 minutes. If no change has occurred to this pressure reading, the most likely cause of any leak is one or more of the wine bottle heads. Check all wine bottle heads to ensure that the caps are correctly engaged and secure. If there was a loss of pressure observed on the LCD, there is an internal leak. A service call may be necessary to correct.
 - vi. If multiple WineStations are connected using the same gas tank source, the units can be disconnected from each other and the same test as described in the above steps can be used to help isolate the source of the gas leak.



LIMITED WARRANTY TERMS & CONDITIONS

Your WineStation will be repaired or replaced, (Napa Technology's option,) if it proves to be defective in material or workmanship under normal use, during the warranty period set forth below, effective from the Date of Purchase of original consumer purchase of the product. This warranty is good only to the original Purchaser.

Limited Warranty Terms & Conditions

Your WineStation will be repaired or replaced, (Napa Technology's option,) if it proves to be defective in material or workmanship under normal use, during the warranty period set forth below, effective from the Date of Purchase of original consumer purchase of the product. This warranty is good only to the original Purchaser.

Hardware

Napa Technology warrants the hardware will be free of defects in material and workmanship under normal use for the entire warranty period. Napa Technology further warrants, that the hardware will conform to specifications in effect on the date of shipment of the product through any extended warranty period that may be in effect. Additional parts and support warranties are available for purchase.

Software

The limited warranty covers all Napa Technology software elements. Additional software and support warranties may be purchased.

DURATION OF WARRANTY

Hardware and Software Limited Warranty for PARTS is for a period of one (1) year commencing from the install date to Purchaser. Warranty for LABOR is for a period of three (3) months commencing from the install date to Purchaser. Additional phone, parts and software warranty options may be purchased.

Terms of Warranty

Napa Technology will work with the Purchaser to identify the cause of a particular issue with the WineStation systems. If it is determined that a part (or hardware) replacement is required, Napa Technology will provide a replacement part. Napa Technology shall pay expenses for shipment of repaired or replacement products to Purchaser. Purchaser shall provide all labor required to either remove the defective part from the system or to replace the defective part with a new or refurbished part. Purchaser shall pay expenses for return of defective part or parts to be repaired to Napa Technology. Napa Technology will send a Service Technician on site to replace the defective part if the Labor Warranty is still valid or if purchaser pays for the service technician. If it is deemed that the problem is a customer usage issue or a none service problem, there will be a service charge of \$149 for the first hour and \$129 for each additional hour, including travel time. If it is determined that software analysis or a software update is required, Purchaser will provide Napa Technology engineering remote access to the WineStations to enable troubleshooting and verification of software updates. Items not covered under this warranty include (Laptop computer, Clean-Pour Dispensing Heads, Pick Up tubes, External Router, dimming LCD's and AccuServe Smartcards).

50 N. Gibson Rd. Suite 160 Henderson, NV 89014

(888) 988-NAPA

info@napatechnology.com

www.napatechnology.com



LIMITED WARRANTY TERMS & CONDITIONS

WARRANTY EXCLUSIONS

Warranty does not apply if the hardware, product or software or any other equipment upon which the software is authorized by Napa Technology or its suppliers or licensors to be used (a) has been damaged through abuse or negligence or by accident, (b) has been altered except by an authorized Napa Technology representative, (c) has been subjected to abnormal physical or electrical stress (i.e., lightning strike) or abnormal environmental conditions, (d) has been lost or damaged in transit, or (e) has not been installed, operated, repaired or maintained in accordance with instructions provided by Napa Technology. Warranty shall apply only to those products that are branded by Napa Technology with a Napa Technology trademark ("Napa Technology Branded"). Napa Technology does not warrant any third-party products even if included with Napa Technology Branded Products.

MAINTENANCE & SUPPORT

Napa Technology "Maintenance & Support" consists of (a) repair or replacement of defective components/products and (b) remote technical support, Software Maintenance & Support consists of (a) bug fixes, (b) maintenance releases,

(c) minor and major upgrades and (d) remote technical support. Issues with products are reported by calling Napa Technology at 1-800-603-6550. Technical Support will work to resolve the issue over the phone. If it is determined that a product or part needs to be returned to Napa Technology for repair or replacement; Purchaser ships the product(s) to the address provided for repairs.

Notes: (1) Purchaser pays for shipping to Napa Technology service location. (2) Napa Technology pays for return of repaired or replacement product(s) back to Purchaser. Napa Technology will make all reasonable efforts to repair or replace any returned product(s) within 10 business days of receipt. In the event that the customer is covered by Original Warranty, a Service Technician will be dispatched to the customer site to replace the defective part. Napa Technology, LLC reserves the right to use refurbished parts to complete repairs.

WARRANTY DISCLAIMERS

THE WARRANTIES HEREIN ARE SOLE AND EXCLUSIVE, AND NO OTHER WARRANTY, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED. TO THE EXTENT PERMITTED BY LAW, NAPA TECHNOLOGY SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT.

50 N. Gibson Rd. Suite 160 Henderson, NV 89014

(888) 988-NAPA

info@napatechnology.com

www.napatechnology.com